### Contacts which are not listed are not used.

### A - Multi-pin connector, 8-pin, brown (T8p)


- 2 Loudspeaker (+) (front right) (not with BOSE)
- 3 Loudspeaker (+) (front left) (not with BOSE)
- 6 Loudspeaker (–) (front right) (not with BOSE)
- 7 Loudspeaker (–) (front left) (not with BOSE)

## B - Multi-pin connector B, 12-pin, blue (T12I)

- 1 Signal (left-side) from digital radio -R147-
- 2 Signal earth to CD changer -R41-
- 3 Signal earth from digital radio -R147-
- 4 Permanent live to CD changer -R41-
- 5 BOSE coding to earth (only with BOSE)
- 6 CD data output to CD changer -R41-
- 7 Signal (right-side) from digital radio R147-
- 8 Signal (left-side) from CD changer -R41-
- 9 Signal (right-side) from CD changer -R41-
- 10 Switched positive to CD changer -R41-
- 11 CD data input from CD changer -R41-
- 12 CD-CLK from CD changer -R41-

# C - Multi-pin connector, 12-pin, black (T12m)

- 1 Speed signal (not used)
- 2 Signal from reversing light switch -F4-(not used)
- 3 Signal (front left) to amplifier -R12-(only with BOSE)
- 5 Signal (rear left) to amplifier with bass loudspeaker -R44- in luggage compartment (left-side) / amplifier -R12-
- 6 NF- (low frequency) from telephone transmitter and receiver unit -R36- / pre-fitted components for mobile phone installation
- 7 K-diagnosis
- 8 Signal earth to amplifier with bass loudspeaker -R44- in luggage compartment (left-side) / amplifier -R12-
- 9 Signal (front right) to amplifier -R12-(only with BOSE)
- 11 Signal (rear right) to amplifier with bass loudspeaker -R44- in luggage compartment (left-side) / amplifier -R12-
- 12 NF + (low frequency) from telephone transmitter and receiver unit -R36- / pre-fitted components for mobile phone installation

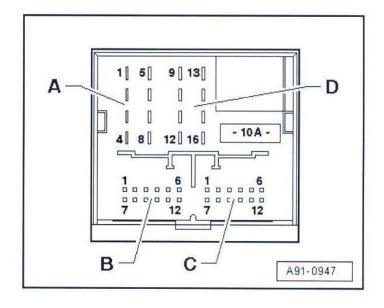

### D - Multi-pin connector, 8-pin, black (T16g)

- 9 CAN Bus High (Infotainment)
- 10 CAN Bus Low (Infotainment)
- 11 NF mute (low frequency) from prefitted components for mobile phone installation
- 12 Terminal 31
- 13 Switched positive to amplifier with bass loudspeaker -R44- in luggage compartment (left-side) / amplifier -R12-
- 14 Anti-theft alarm earth (not used)
- 15 Terminal 30
- 16 Permanent live to PIN 15 (anti-theft system)