

RVC Control Module (N52) Location

- Under right rear storage area
- Accessed by removing false bottom cover

