



Power windows, S70/V70 Function diagram

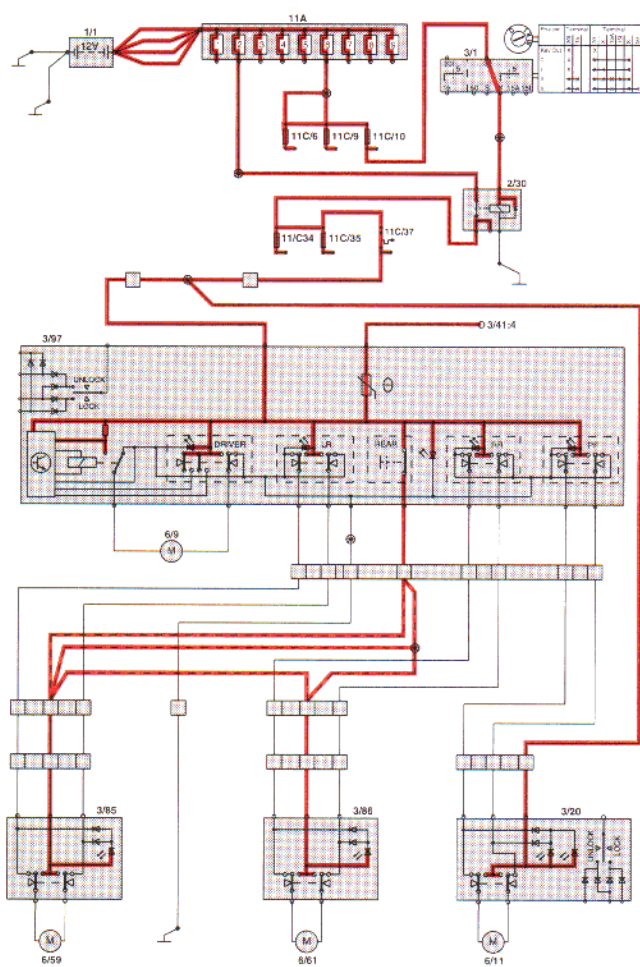


Ignition on.
Power windows not activated.

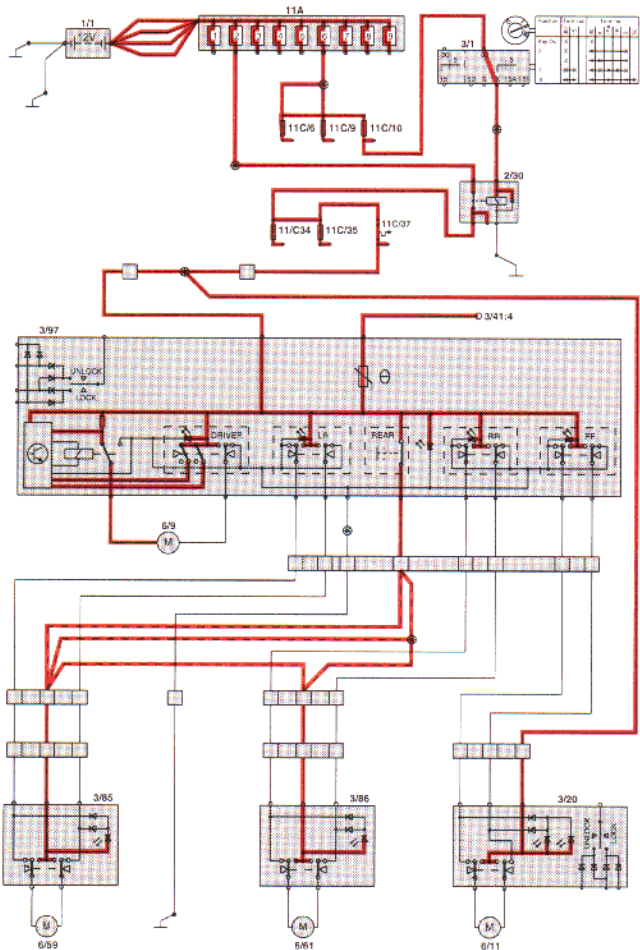

Ignition on.
The driver door power window
switch in
Down position.

Power windows, S70/V70

Function diagram

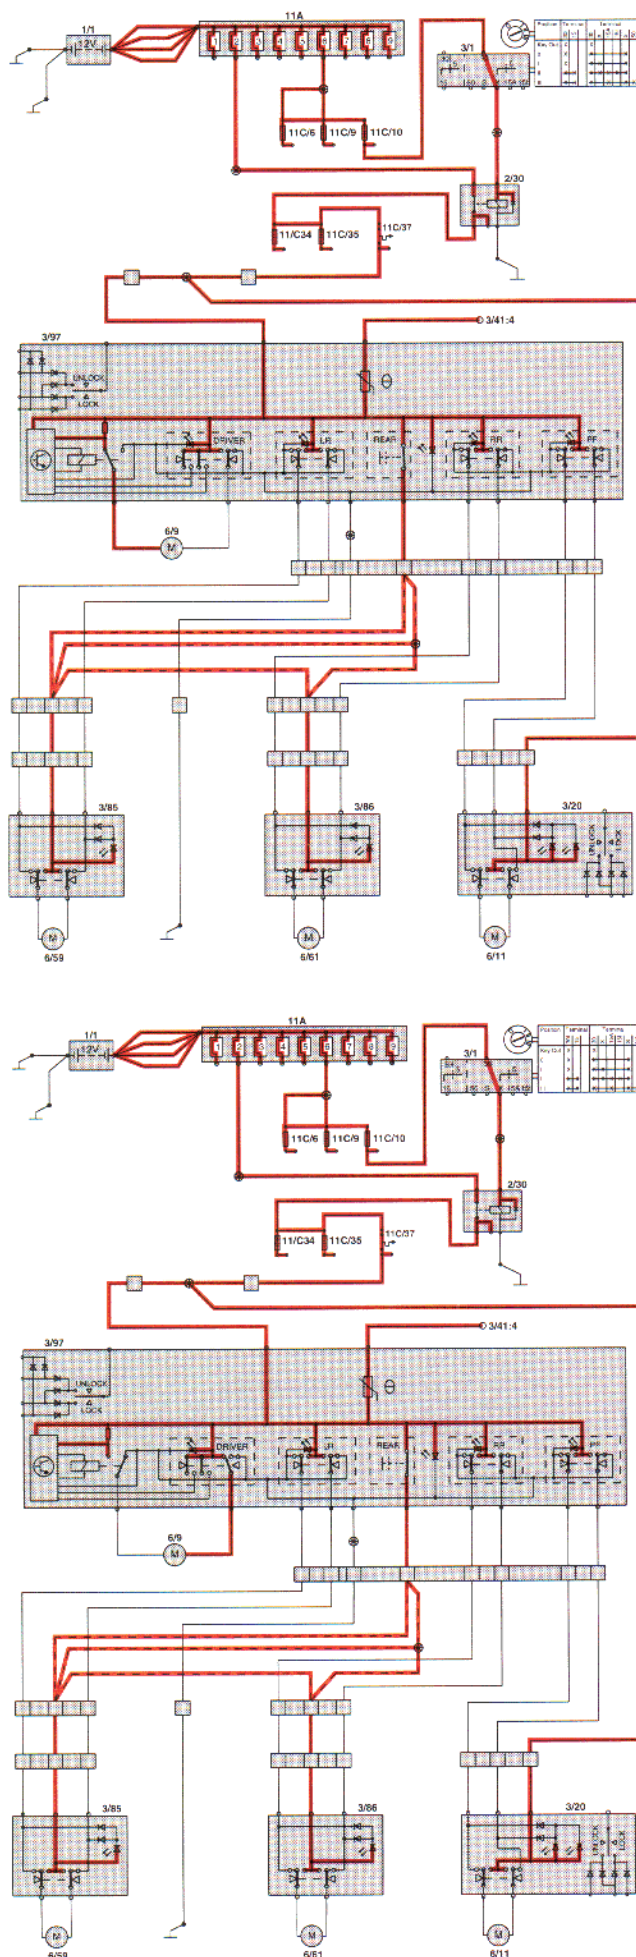

Ignition on.


When the power window switch for driver's door is located in Down position for a short period the voltage to the power windows is held by the autowindow relay until the window has reached the lowest position.

Ignition on.


The driver door power window switch in the Up position.

The driver's door window goes up until the power window switch is released or the window has reached the upper position.

Power windows, S70/V70 Function diagram

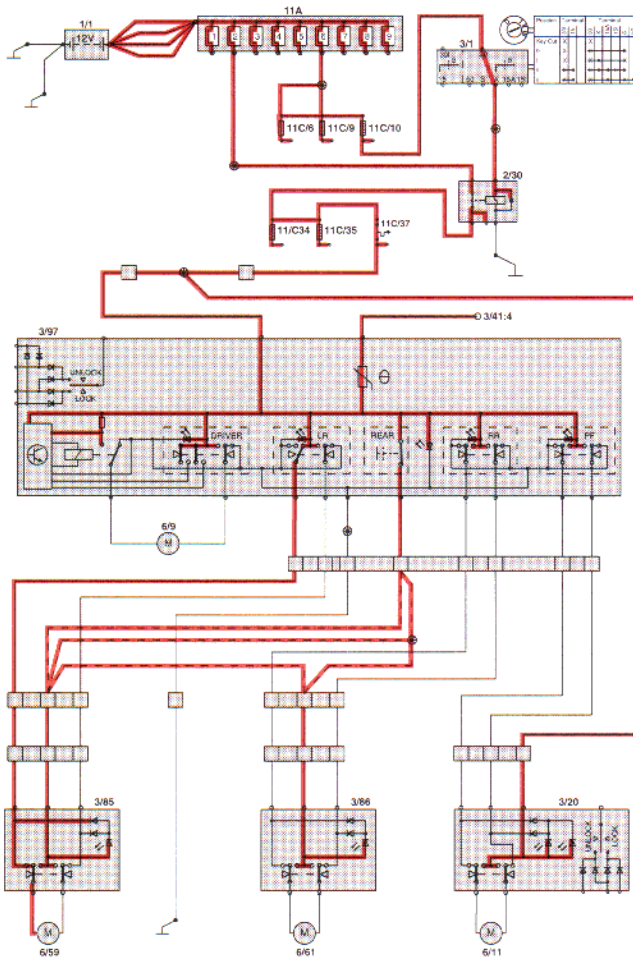


Ignition on.
Opening left rear door window with
driver's door power window switch.

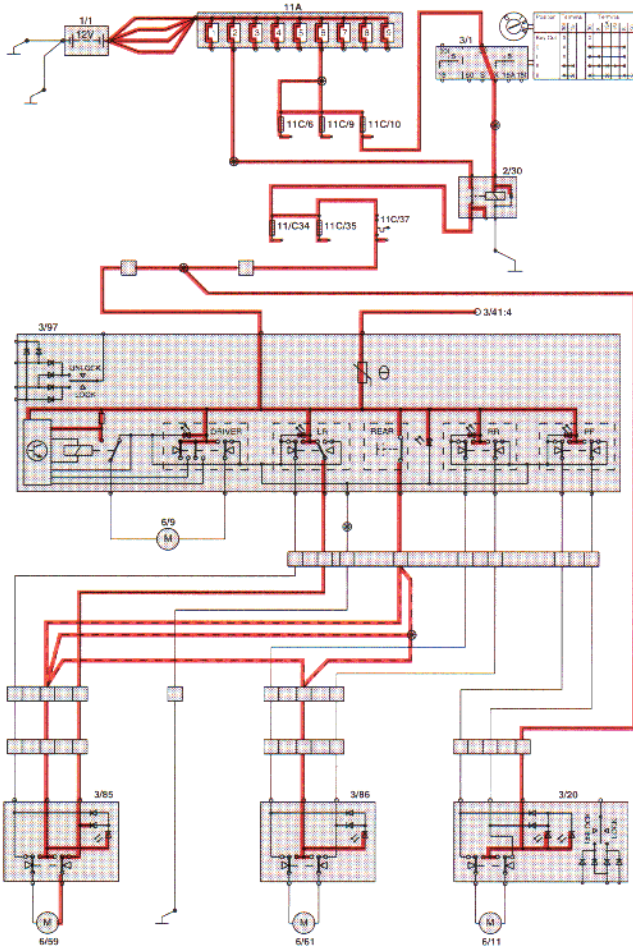


Ignition on.
Closing left rear door window with
driver's door power window switch.

Power windows, S70/V70

Function diagram

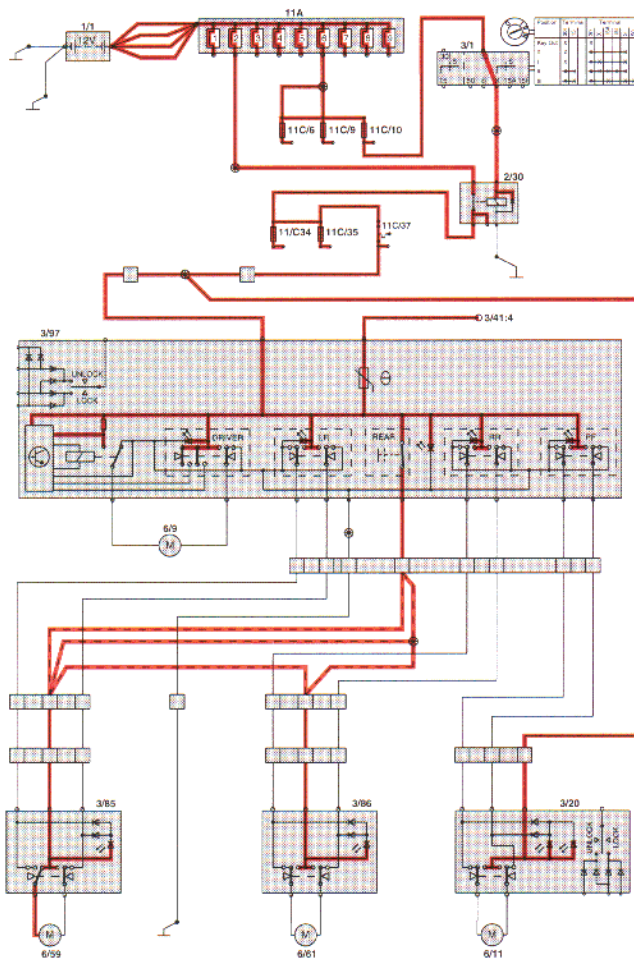


Ignition on.
Opening left rear door window with
left rear door power window switch.

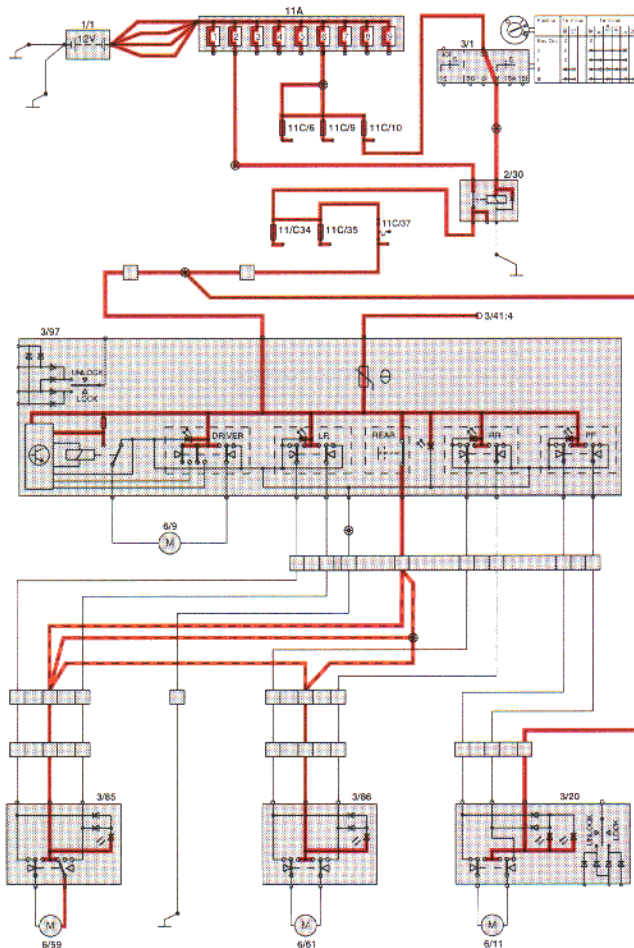

Ignition on.
Closing left rear door window with
left rear door power window switch.

Power windows, S70/V70
Function diagrams

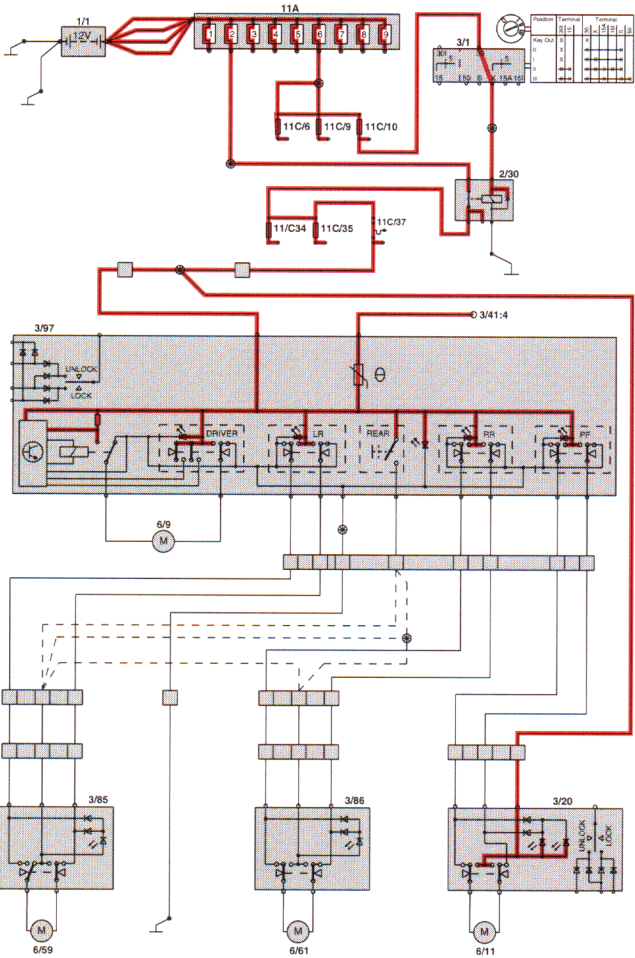

Ignition on.
Blocking rear door power windows
with driver's door switch.