

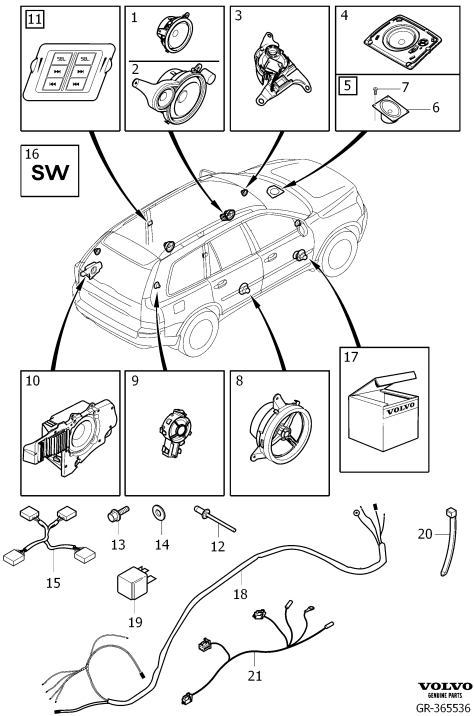


	Fig.	Description	Qty.	PS	Part number
☐	2	Loudspeaker, left CH -568000, 75W	1.00		30752352
☐		Loudspeaker, left CH 568001-, 75W	1.00		8676905
☐		Loudspeaker, right CH -568000, 75W	1.00		30752353
☐		Loudspeaker, right CH 568001-, 75W	1.00		8676906

☐	4	Loudspeaker CH 328409-568000, 40W	1.00		30752350
☐		Loudspeaker CH 568001-, 40W	1.00		8676912
☐	8	Loudspeaker CH 328409-568000, 75W	1.00		30752354
☐		Loudspeaker CH 568001-, 75W	1.00		8676909
☐	9	Loudspeaker CH 328409-568000, 75W	1.00		30752355
☐		Loudspeaker CH 568001-, 75W	1.00		8676910
☐	10	Loudspeaker, with amplifier -2007, 2x70W, (30679176), (30656905)	1.00		30758468
☐	11	Headset socket, kit	1.00	OP	8685789
☐		• Headset socket, left (8633112)	1.00		30739243
☐		• Headset socket, right	1.00		30746096
☐	12	Blind rivet 4.8x11	x		973884
☐	13	Flange screw -2007, SUBWOOF., M6x20	1.00		982758
☐	14	Washer -2007, SUBWOOF., 6.4x18x2	1.00		986499
☐		Washer -2007, SUBWOOF., 7x28x2	1.00		986517
☐	15	Adapter cable -2007, SUBWOOF.	1.00		30646068
☐	16	Subwoofer application To add software for subwoofer.	1.00	SW	6849980
☐		Subwoofer remove To remove the "subwoofer" function.	1.00	SW	6849981
☐		SUB reload Subwoofer Module (SUB).	1.00	SW	8691144
☐		Headphone socket appl	1.00	SW	30664397
☐	17	Loudspeaker kit, with subwoofer (8682090), (30664878)	1.00		30775344
☐	21	Wiring harness, subwoofer Accessory	1.00		30660581