


Ignition System Wiring Diagram

123

N135

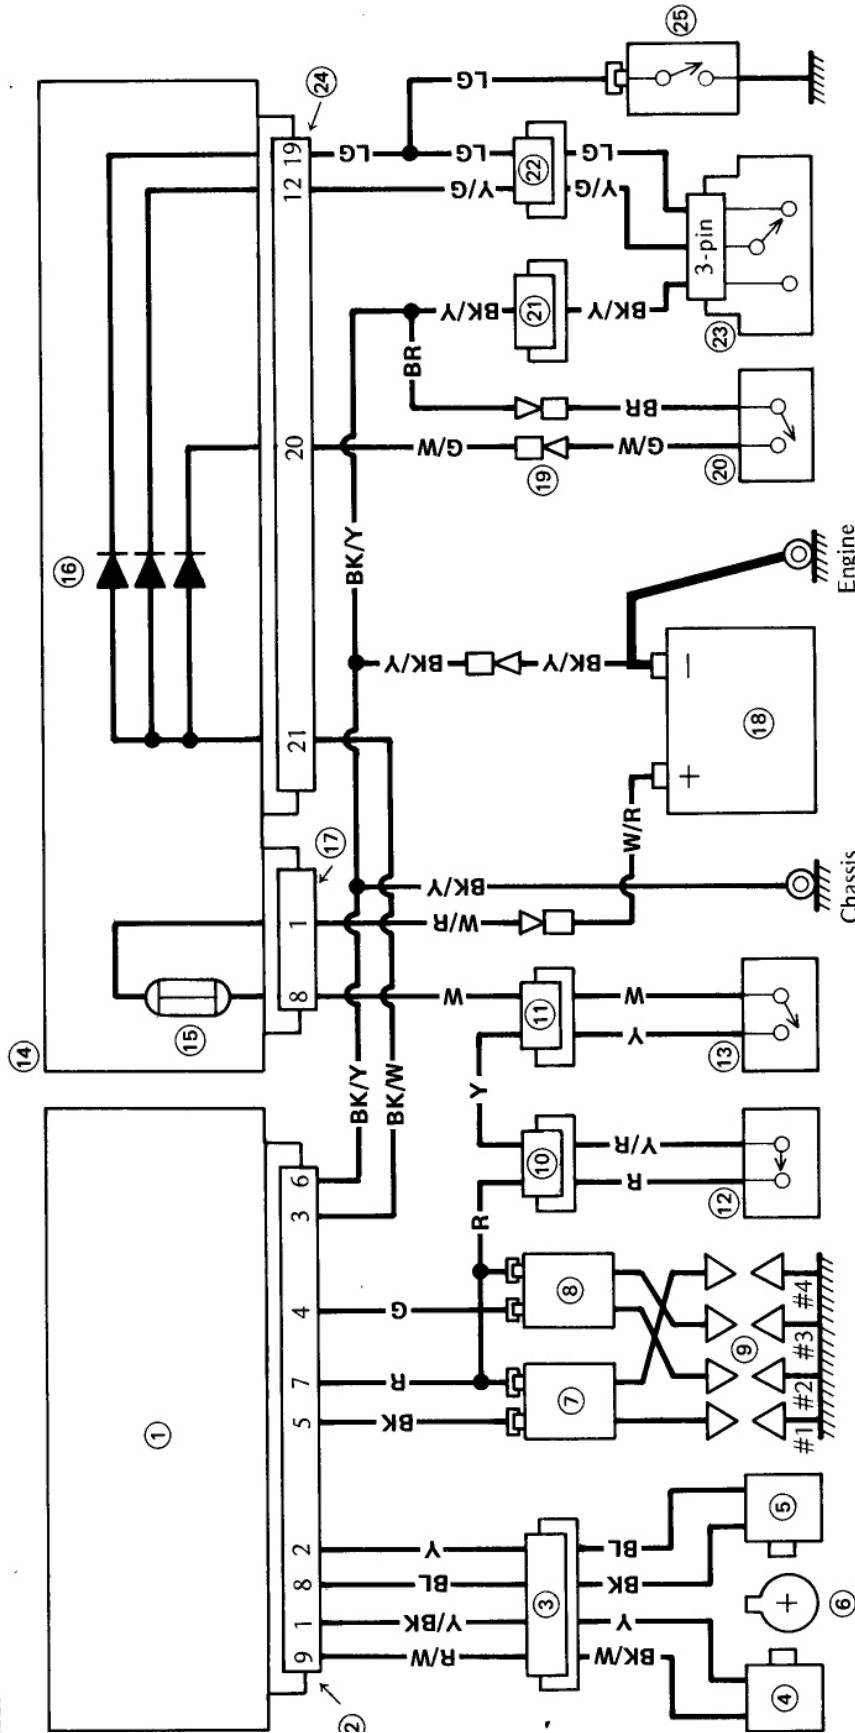

IC igniter

IC igniter 10-pin connector

Pickup coil 4-pin connector

Pickup coil for #1 and #4 cylinders

Pickup coil for #2 and #3 cylinders

Timing rotor

Ignition coil for #1 and #4 cylinders

Ignition coil for #2 and #3 cylinders

Spark plugs

10. Engine stop switch 4-pin connector
(US model: 6-pin connector)

11. Ignition switch 6-pin connector

12. Engine stop switch

13. Ignition switch

14. Junction box

15. 30A fuse

16. Diodes

17. Junction box 4-pin connector

18. Battery

19. Side stand switch leads

20. Side stand switch

21. Starter lockout switch 9-pin connector

22. Starter lockout switch 2-pin connector

23. Starter lockout switch

24. Junction box 18-pin connector

25. Neutral switch