

FAULT CODES AND CHECKS

| DTC | Description |
|-----|-------------|
|-----|-------------|

1211 Rail pressure control failure

| Fault code | Description |
|------------|-------------|
|------------|-------------|

| | |
|---|-----------------------------------------|
| 4 | Rail pressure control shut-down failure |
|---|-----------------------------------------|

Detection

| | |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 | If fault codes 45 or 46 have been present for a pre-determined number of engine cycles then the fault «rail pressure control shut-down failure» is raised. |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------|

Symptoms

| | |
|---|--------------|
| 4 | Engine stop. |
|---|--------------|

Recovery action

| | |
|---|------------------------------------------------------------------------------------|
| 4 | Engine Stop (major fault) Switch «Check Engine Lamp» on, (major or minor fault) |
|---|------------------------------------------------------------------------------------|

Electric failure

| Diagnostic Tree | DTC : 1211 |
|-----------------|------------|
|-----------------|------------|

1211: Rail Pressure Control Failure

Refer to diagnosis for DTC 0190