

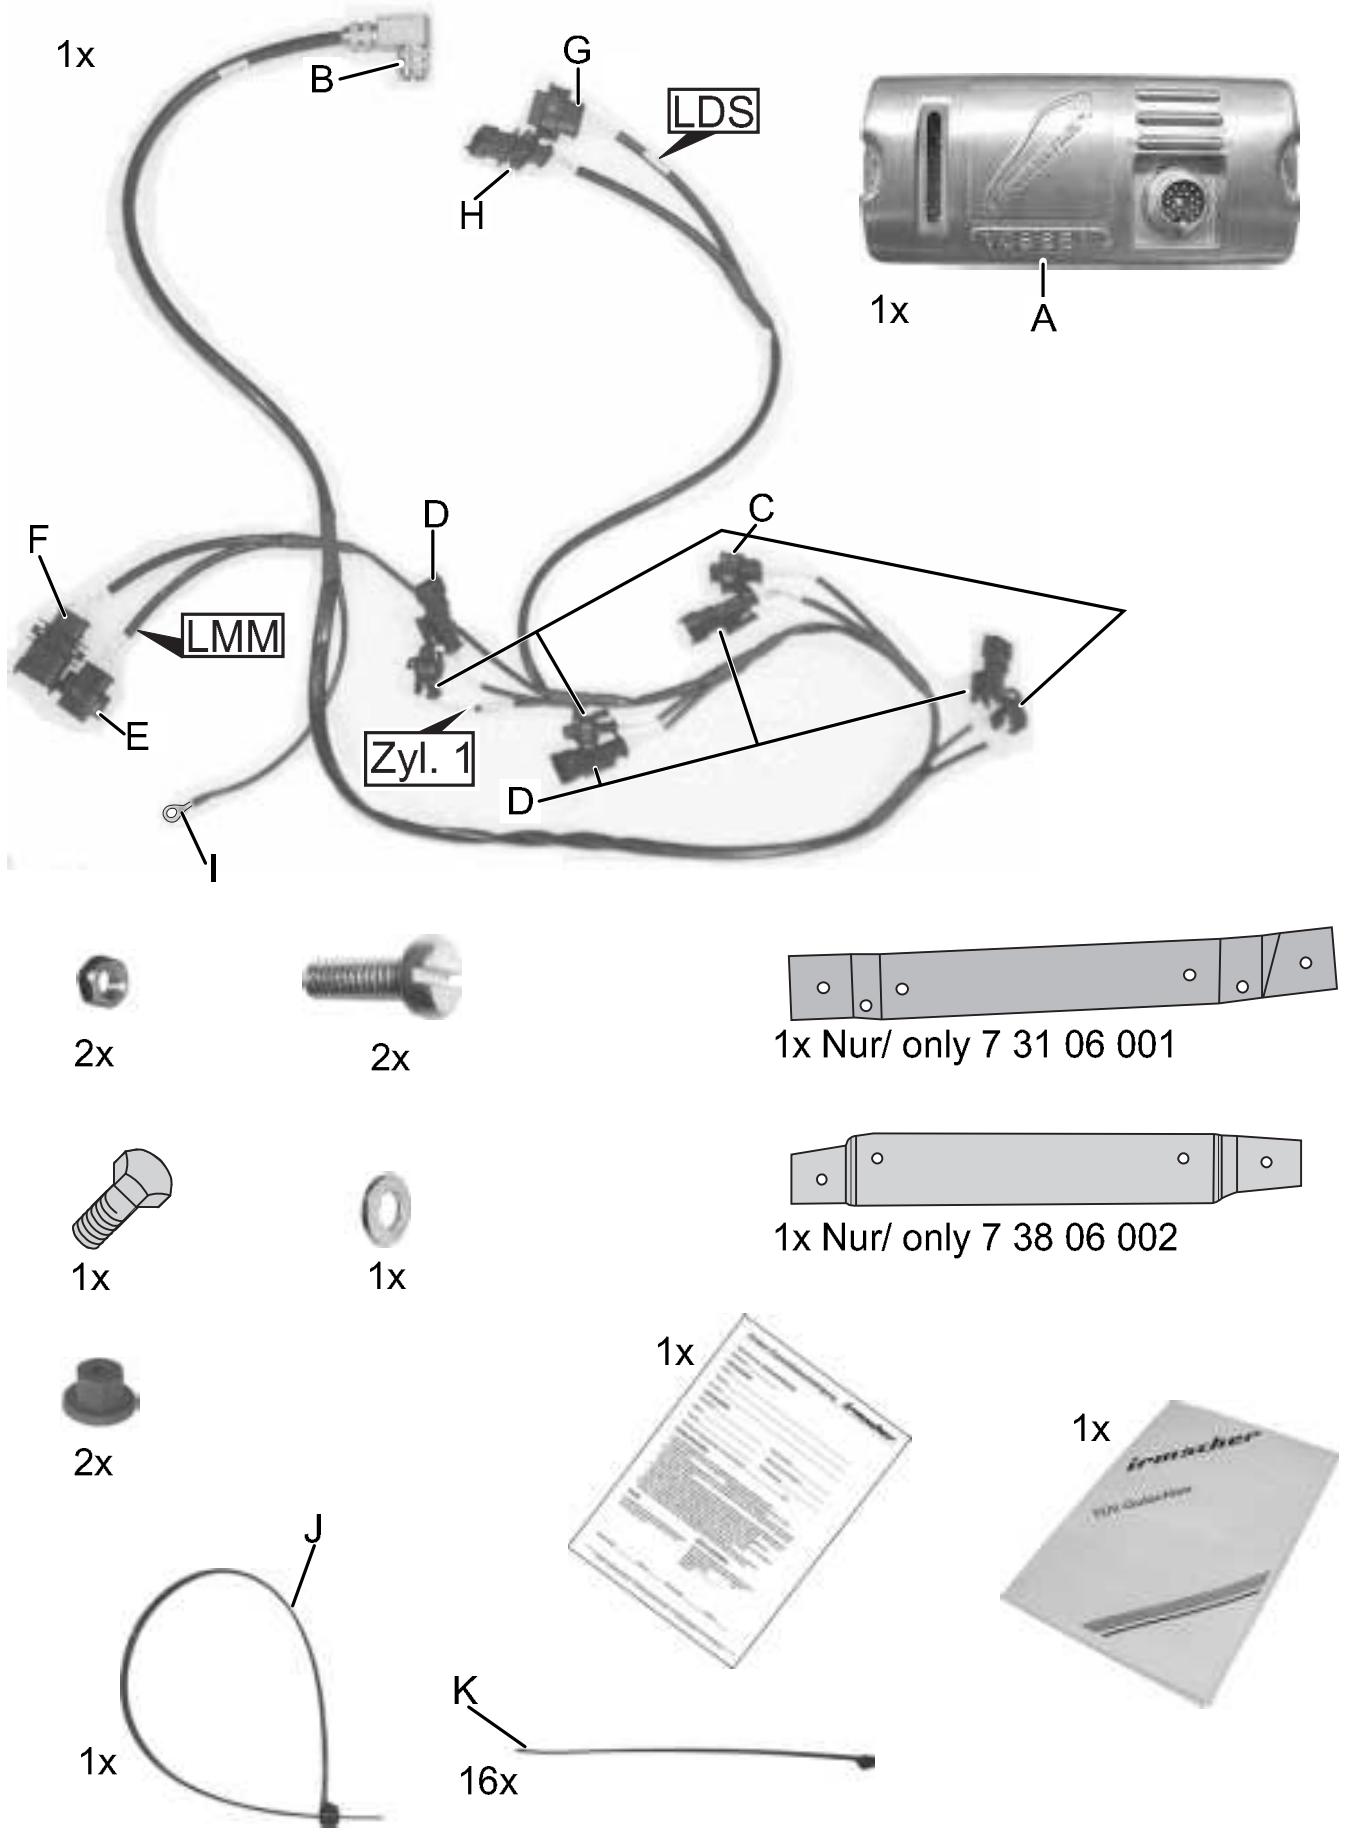








ANBAUANLEITUNG FITTING INSTRUCTION INSTRUCTIONS DE POSE INSTRUCCIONES DE MONTAJE







**007 31 06 001
007 38 06 002
007 85 06 004**





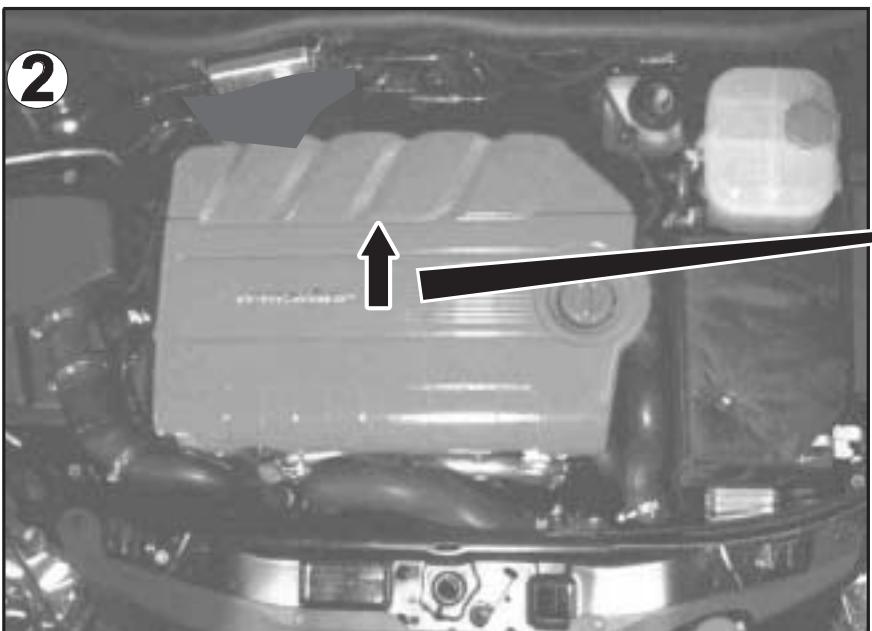


**Astra-H/ Vectra-C alle Modelle und Zafira-B/ Astra-H/ Vectra-C all
models and Zafira-B**

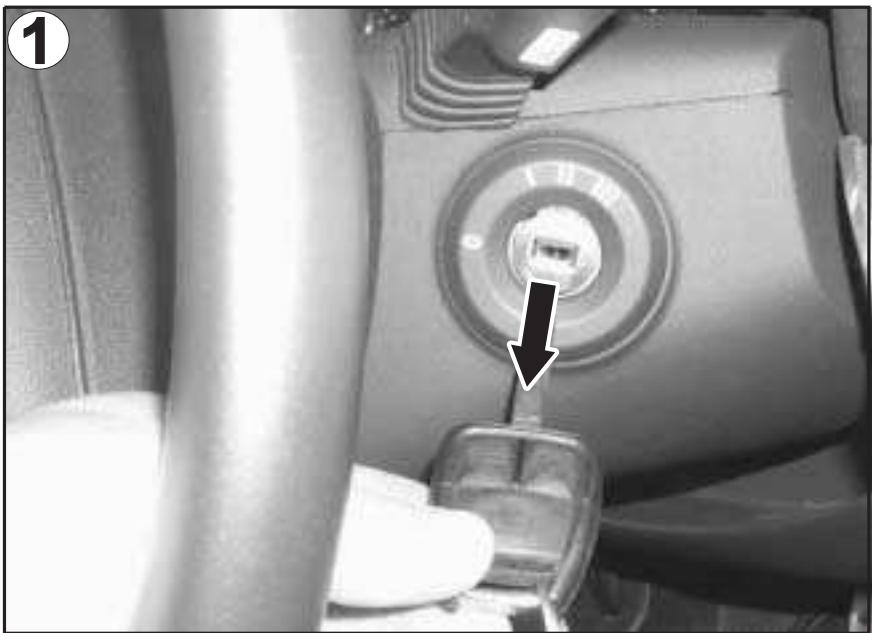

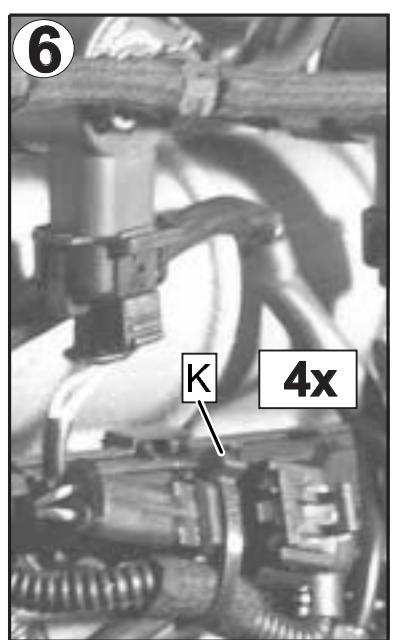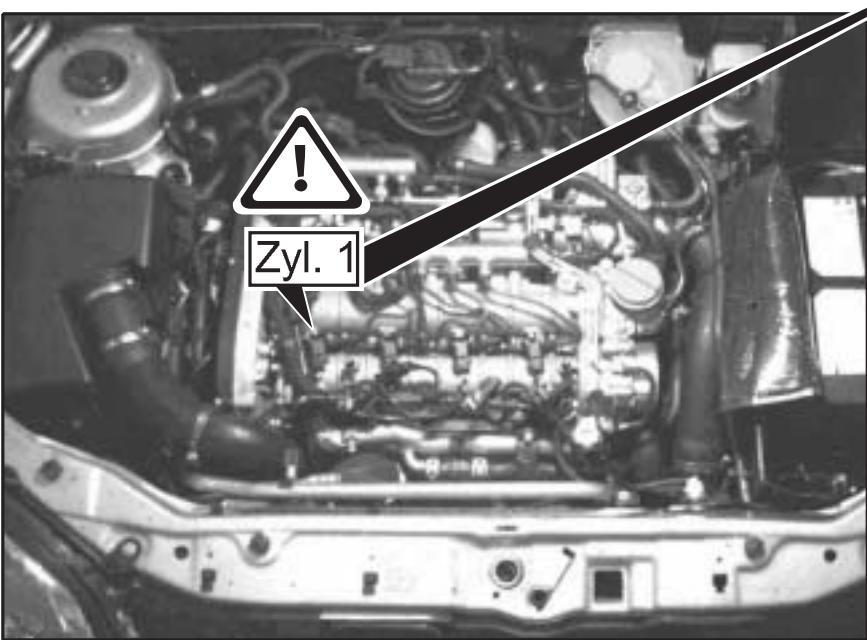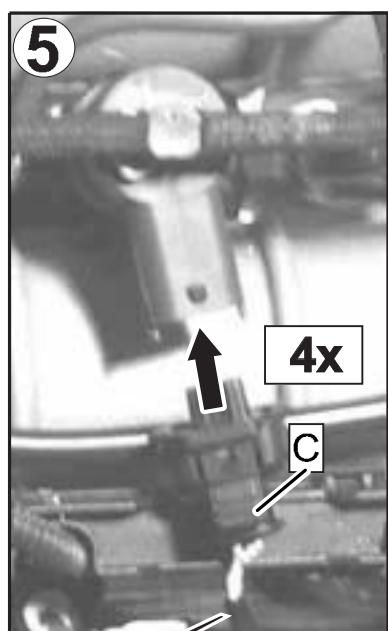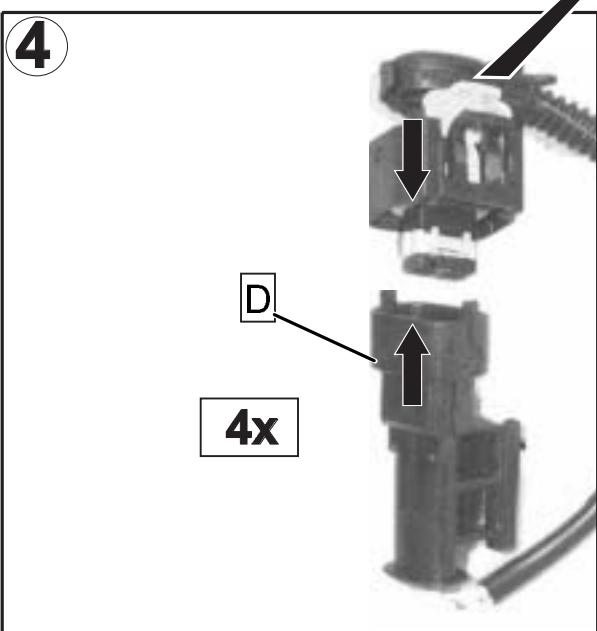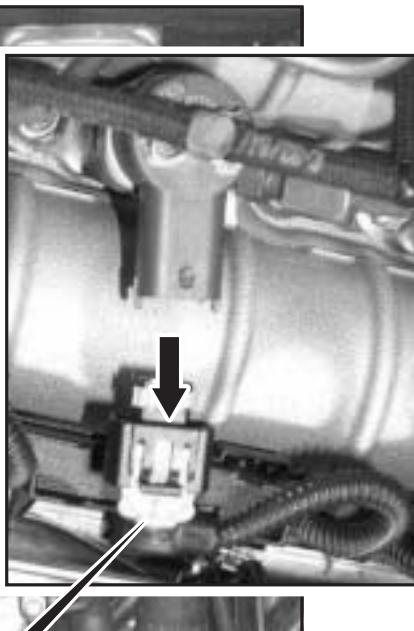
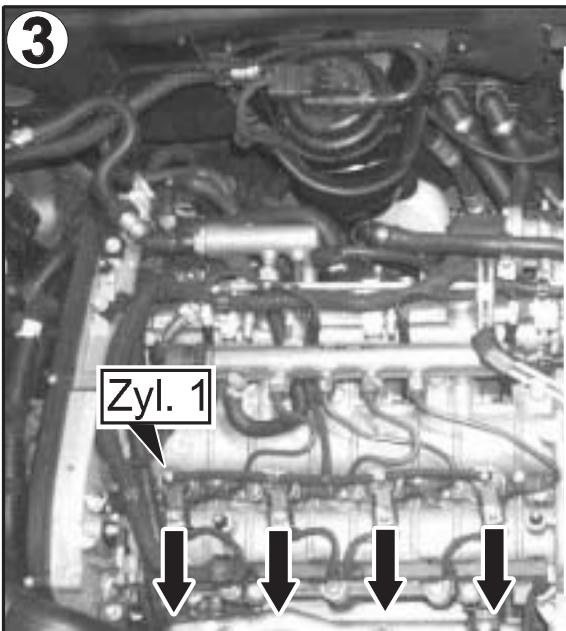


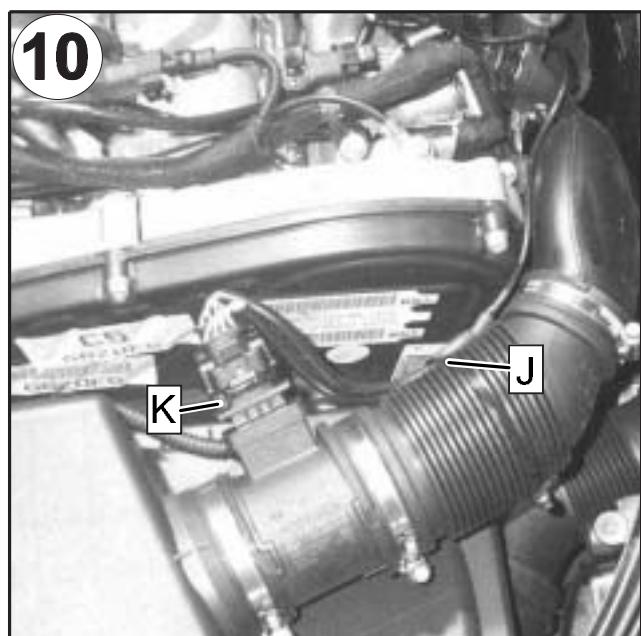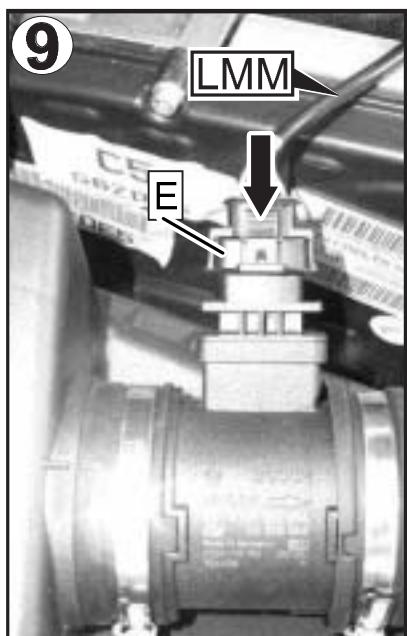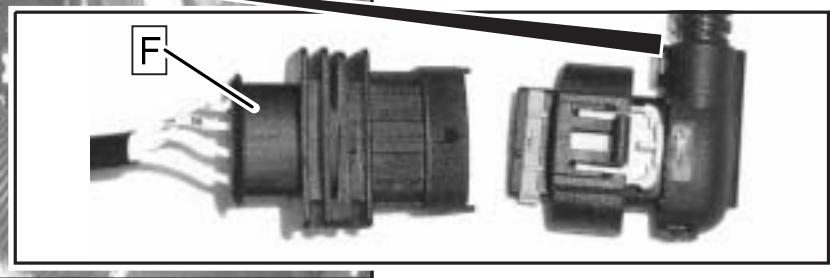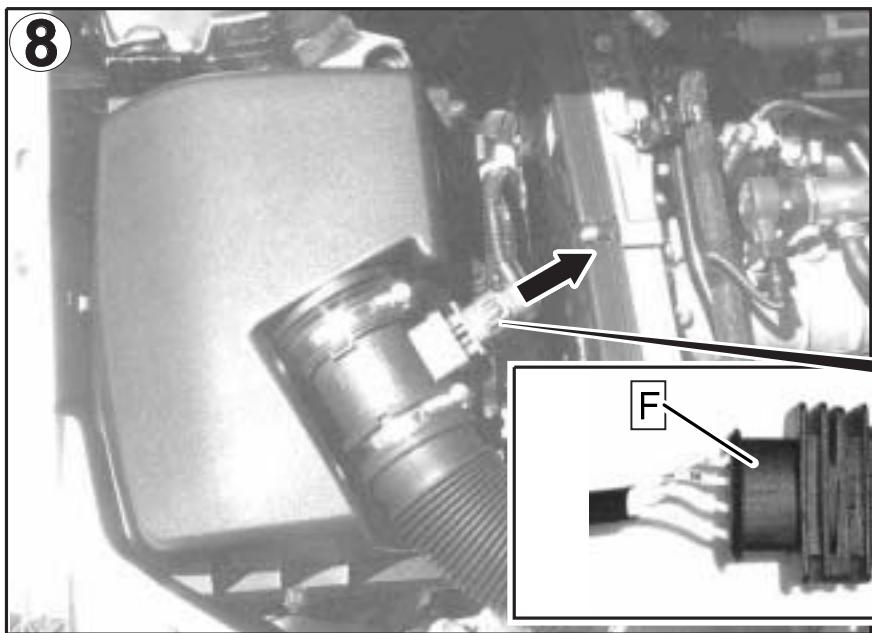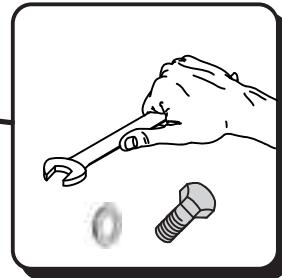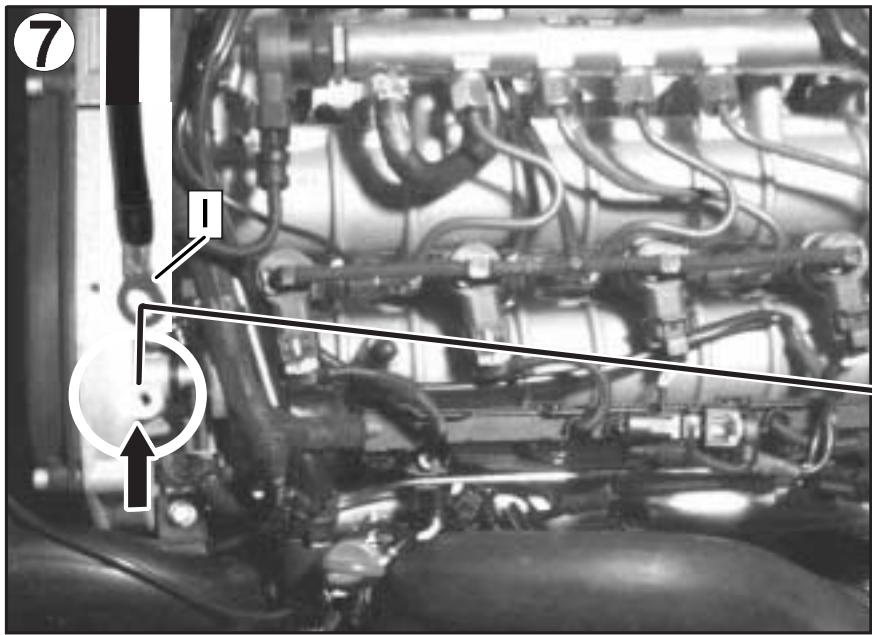

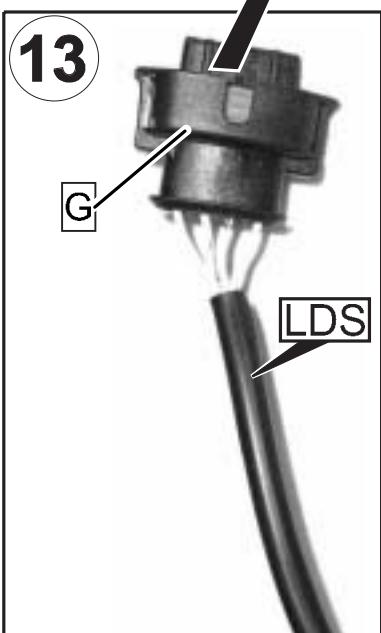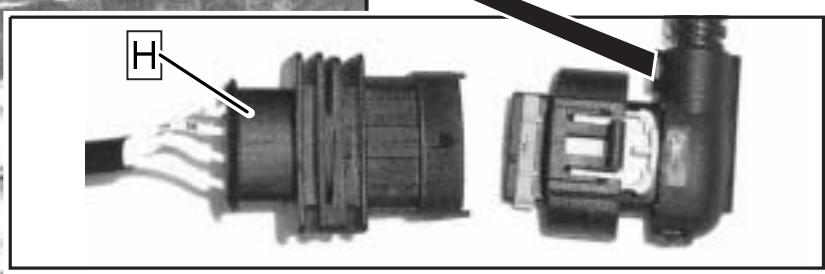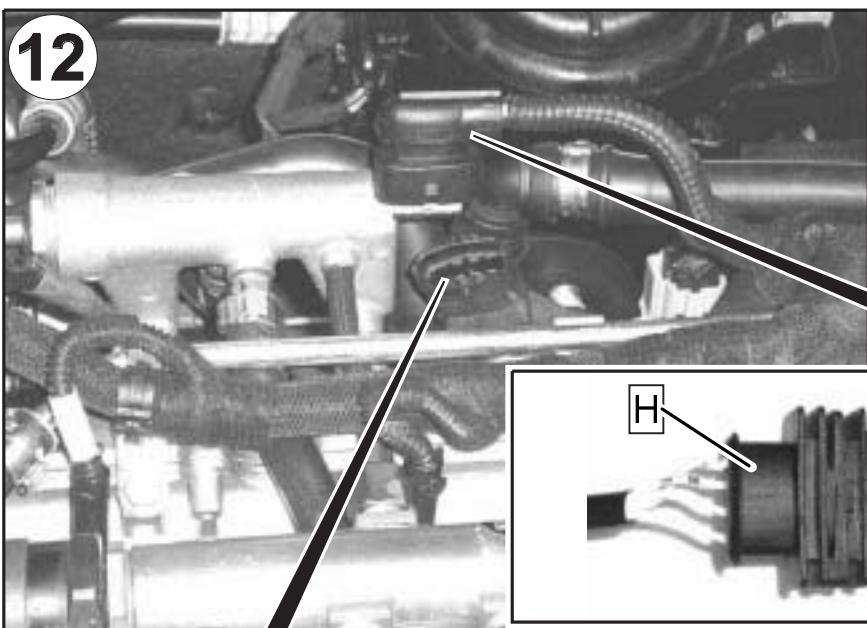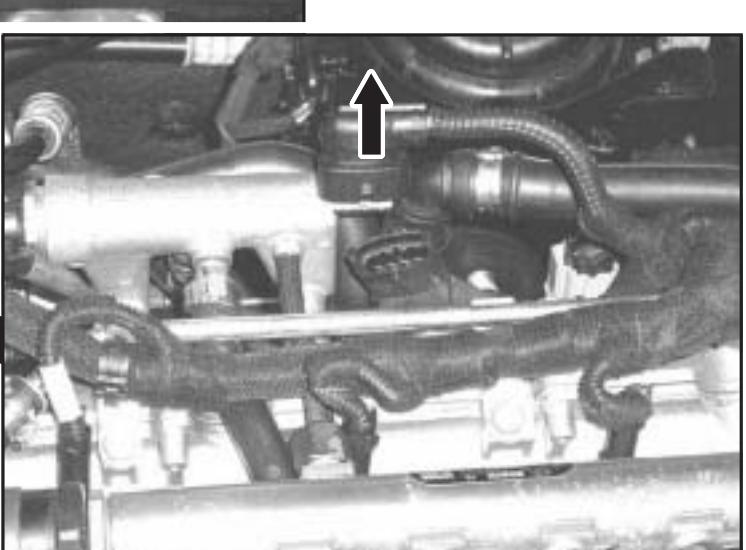
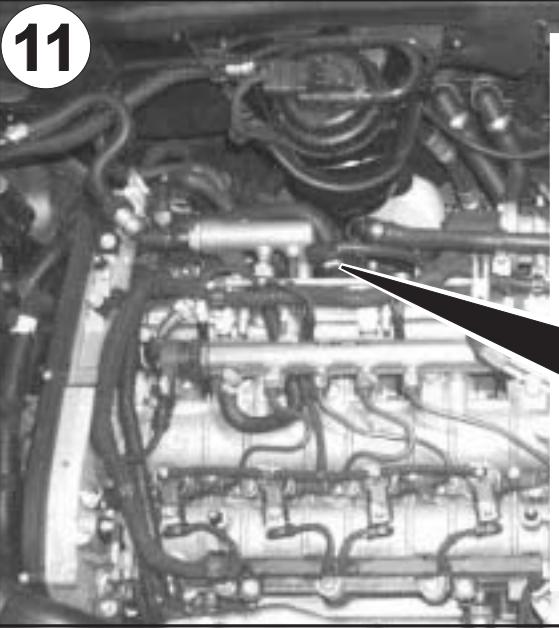


Nur Astra-H alle Modelle/ Only Astra-H all models


14

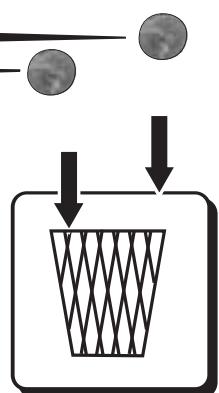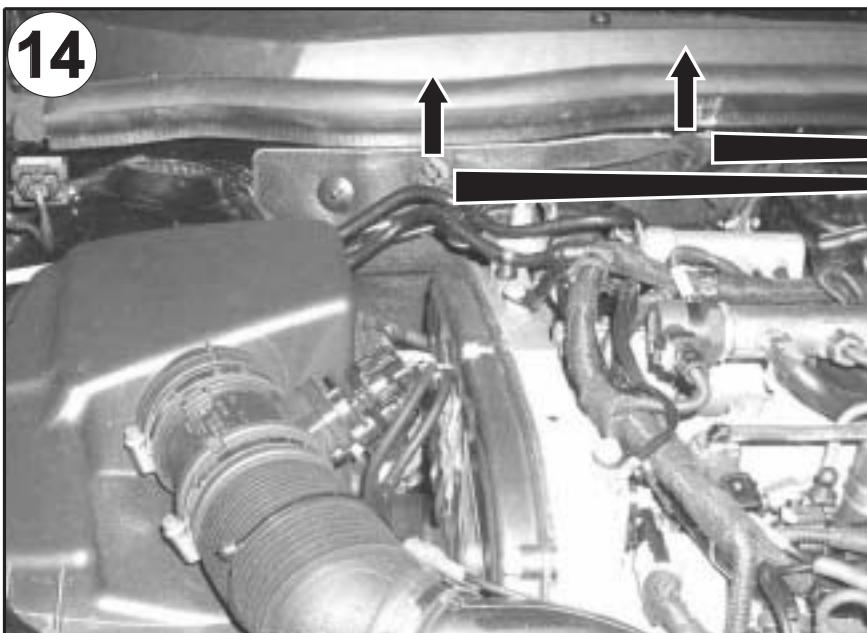


15

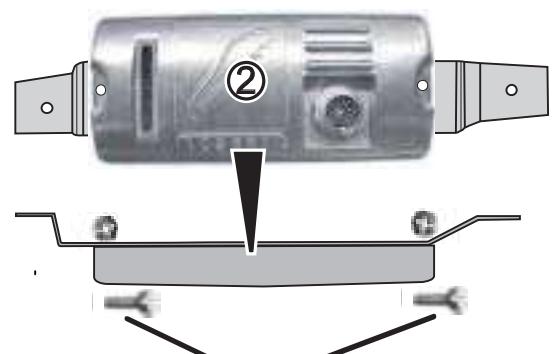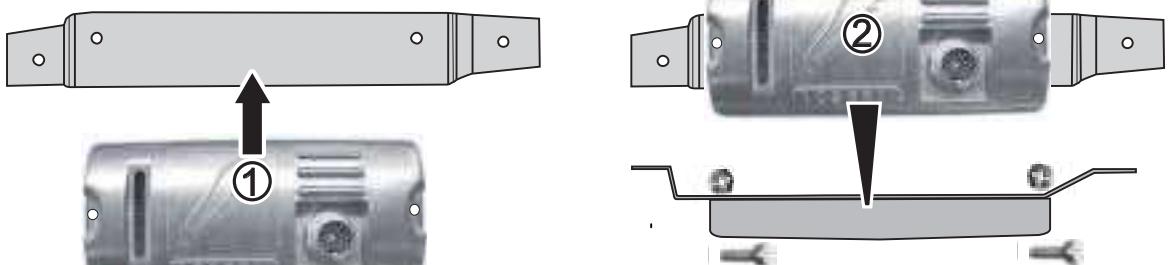


16

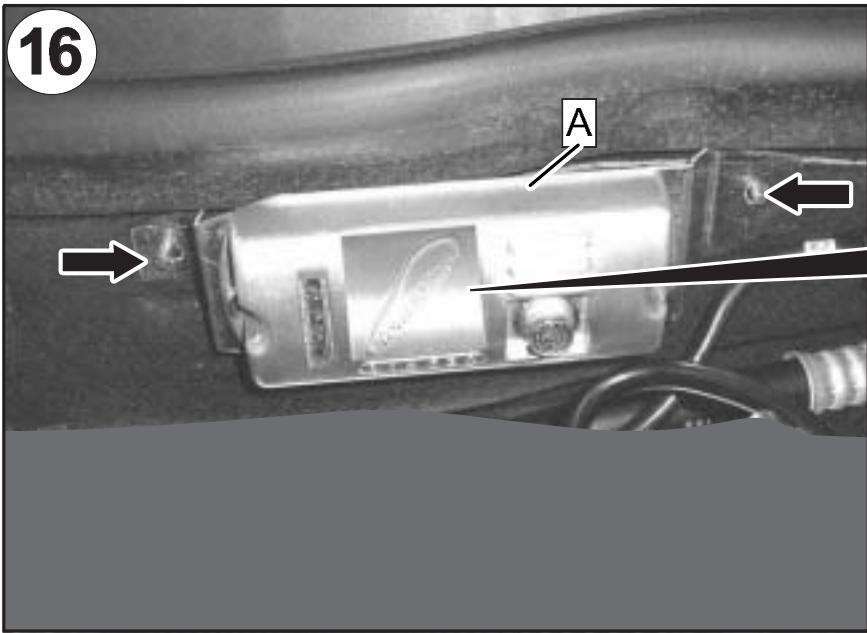


17

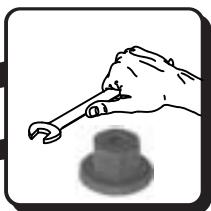






18

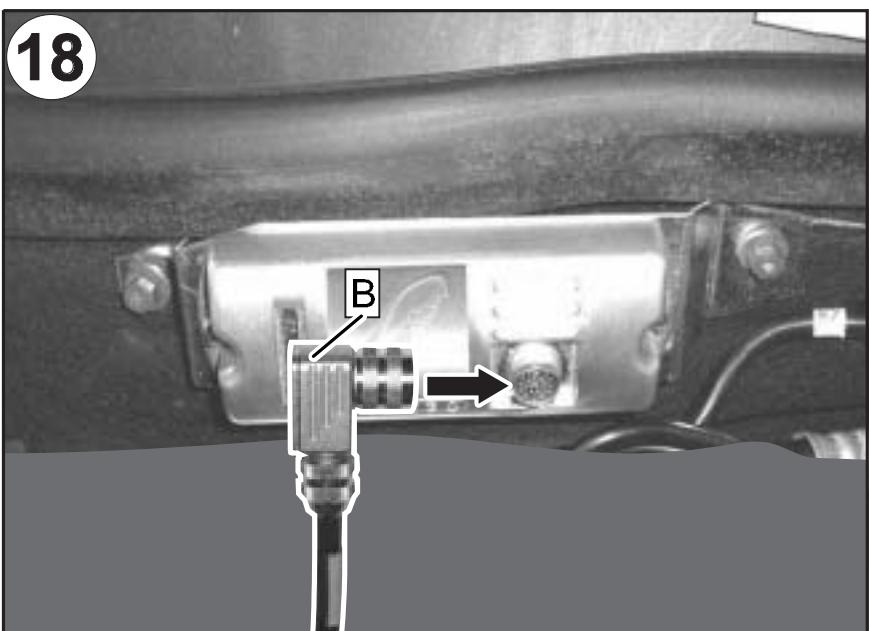


19

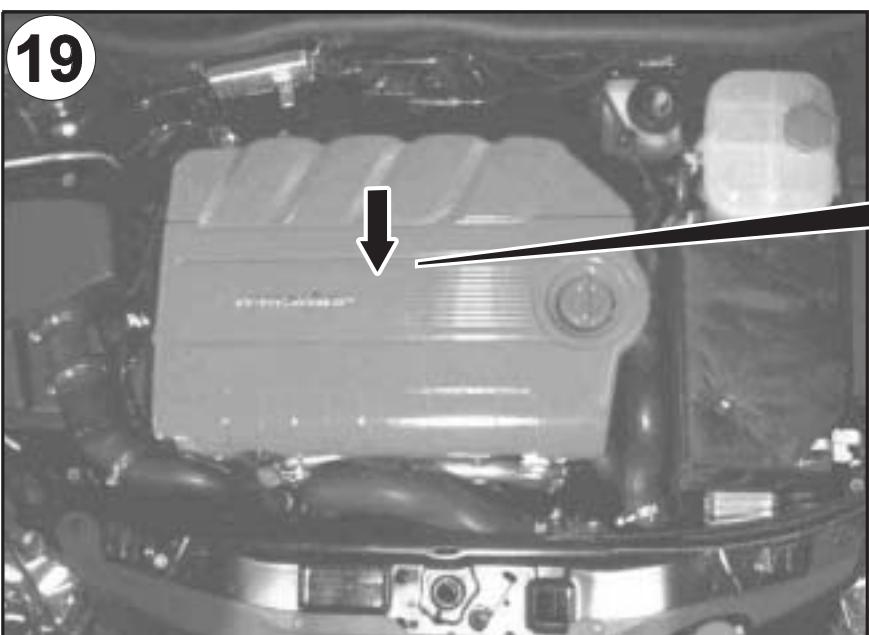



Nur Zafira-B/ Only Zafira-B

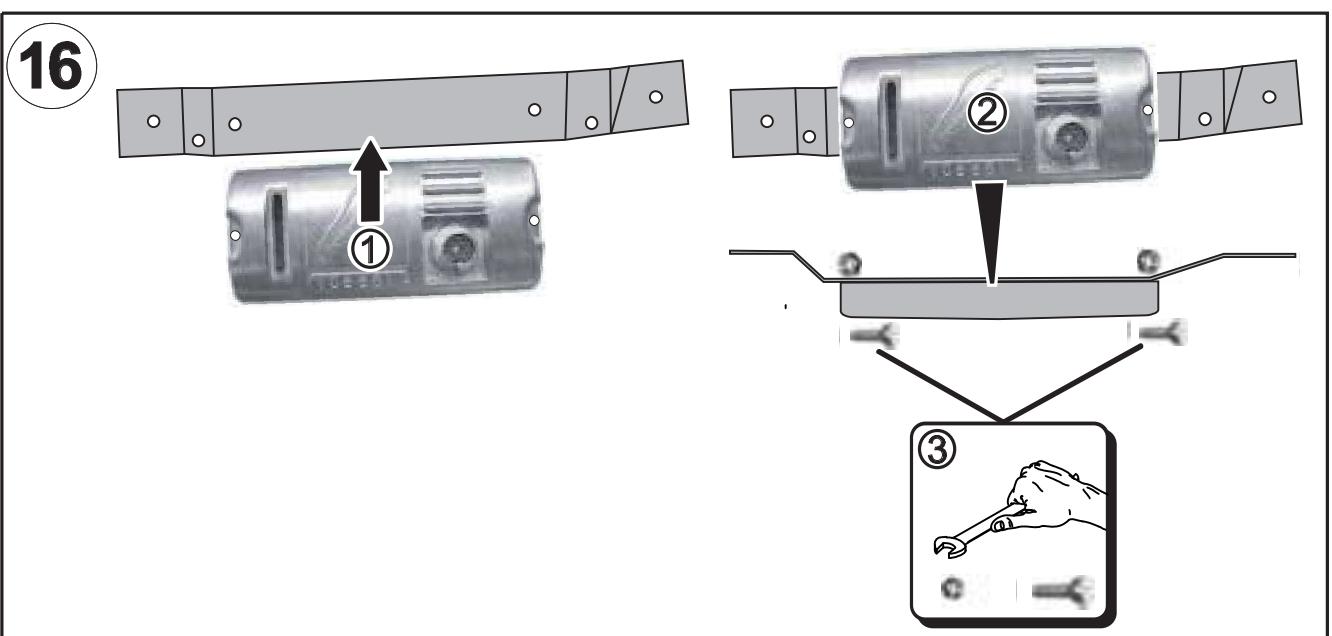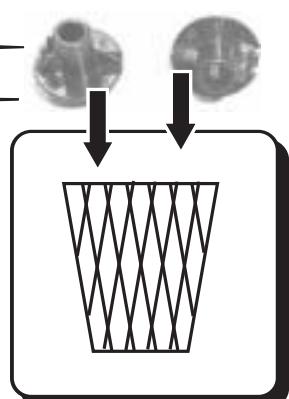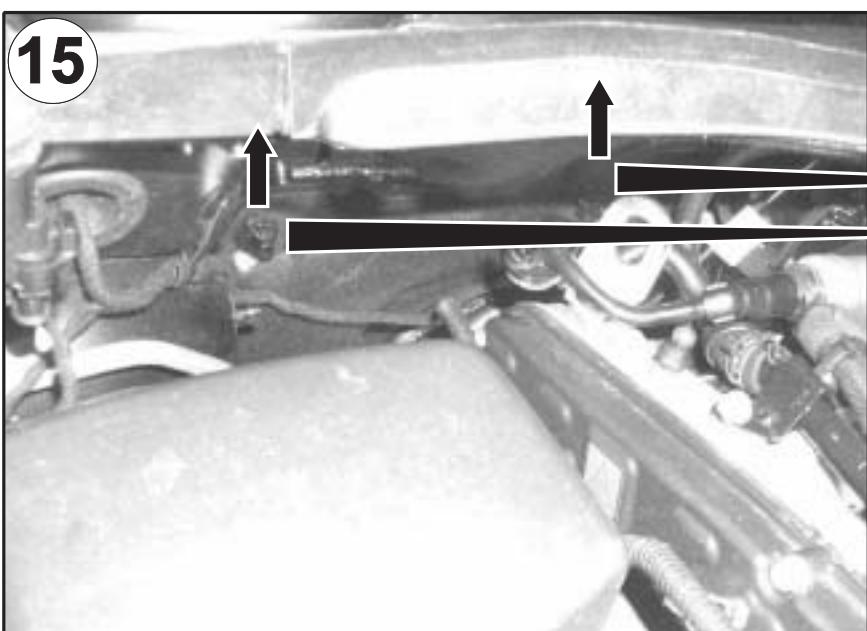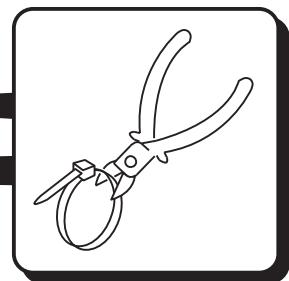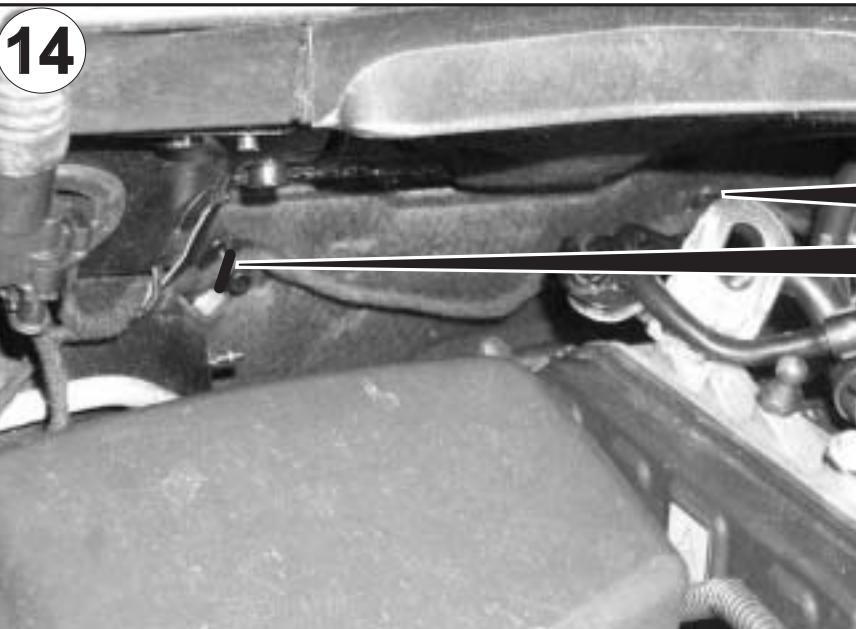


17

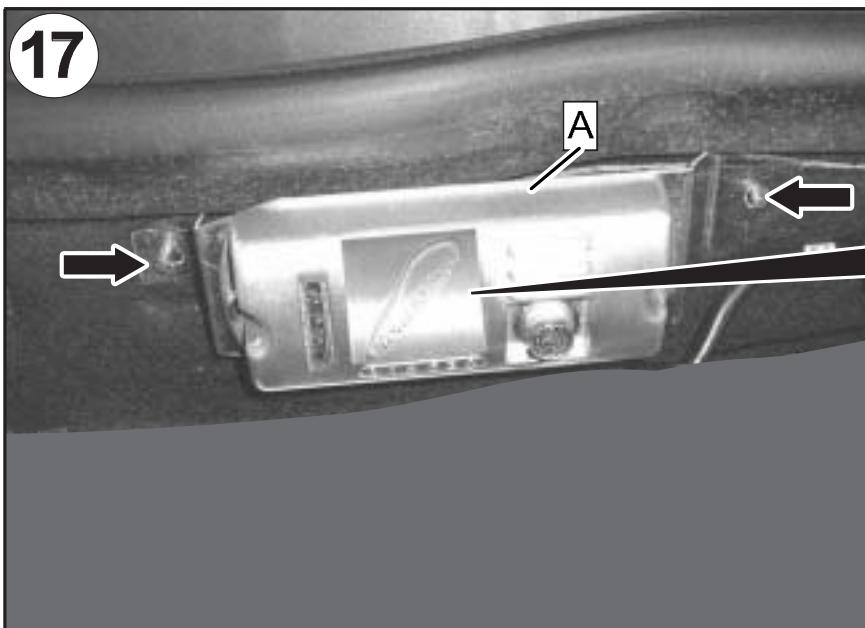



18

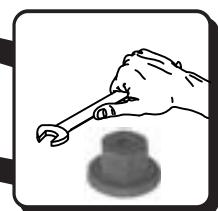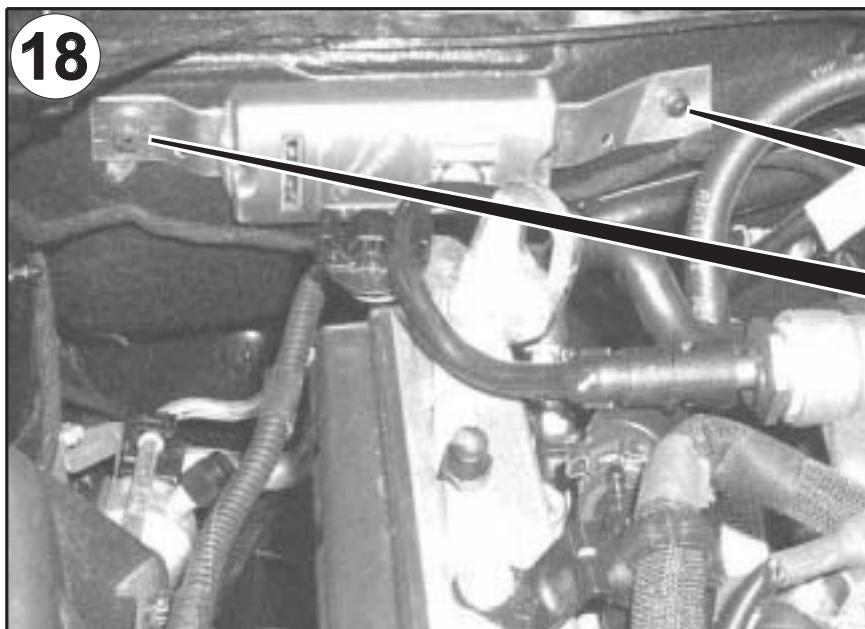


19

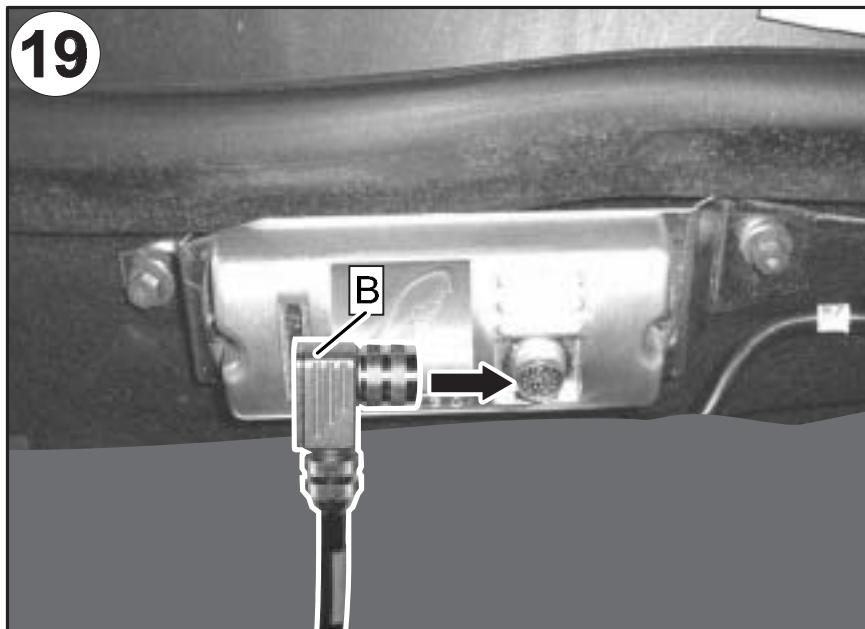






20


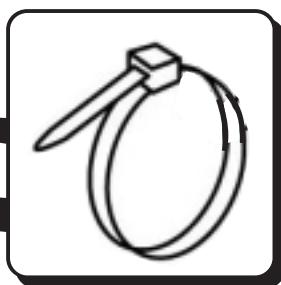
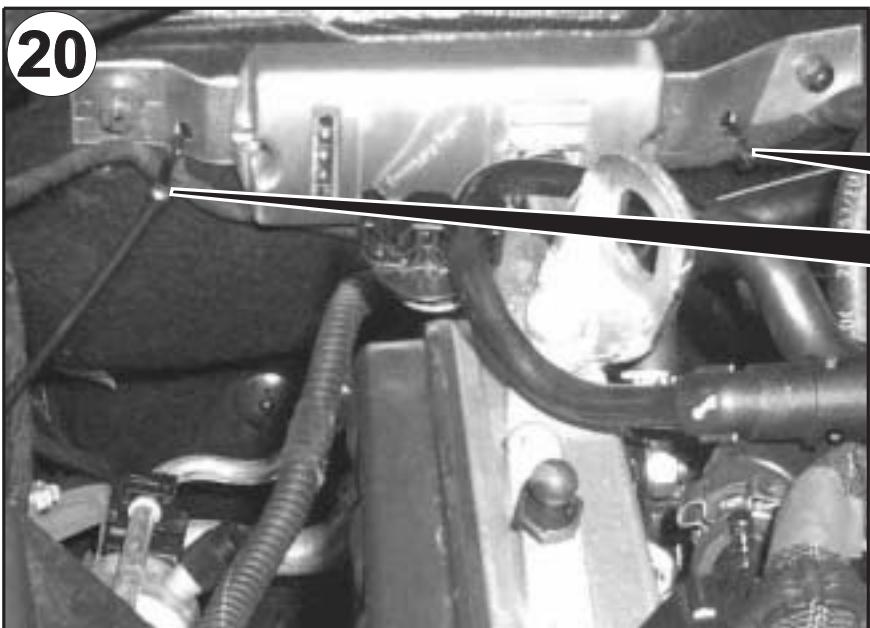


21

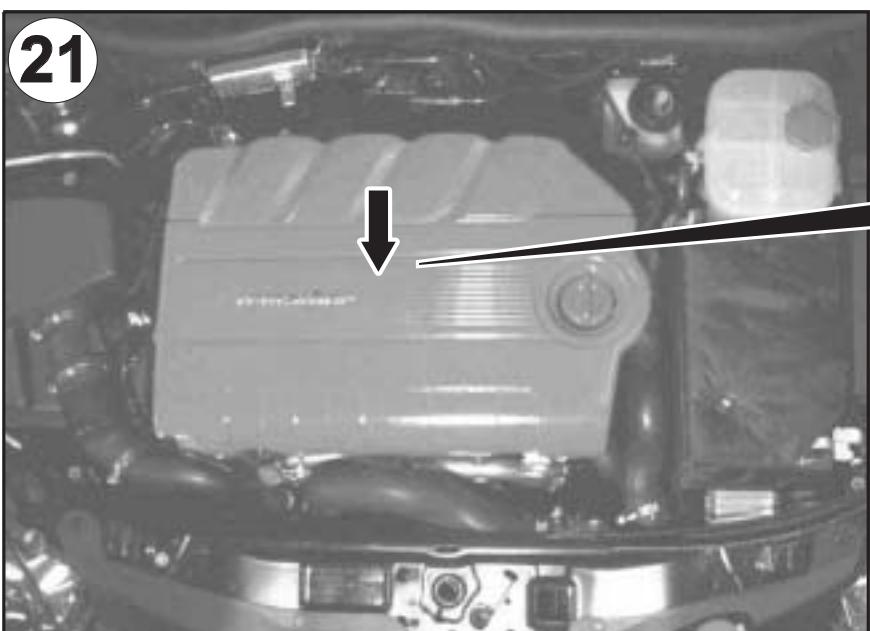

Nur Vectra-C alle Modelle/ Only Vectra-C all models

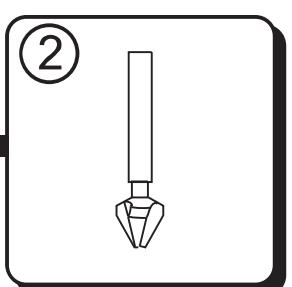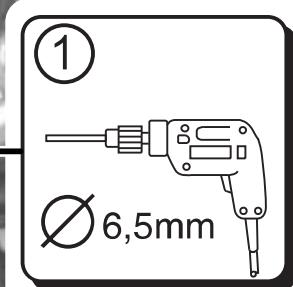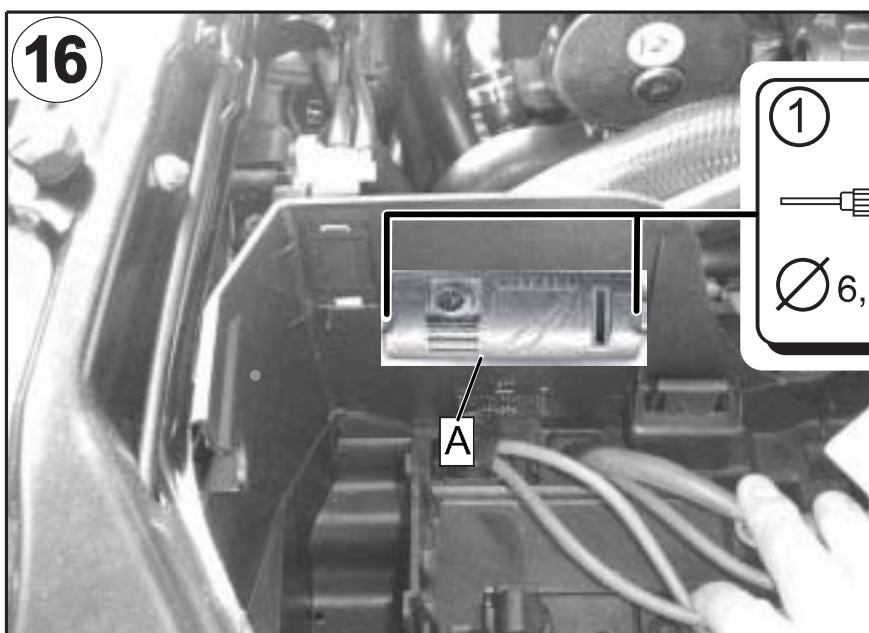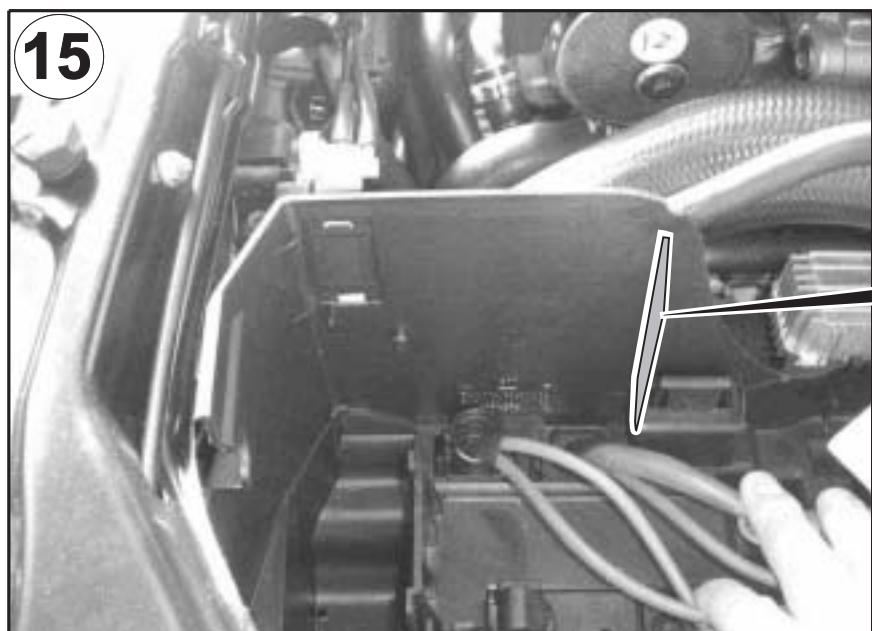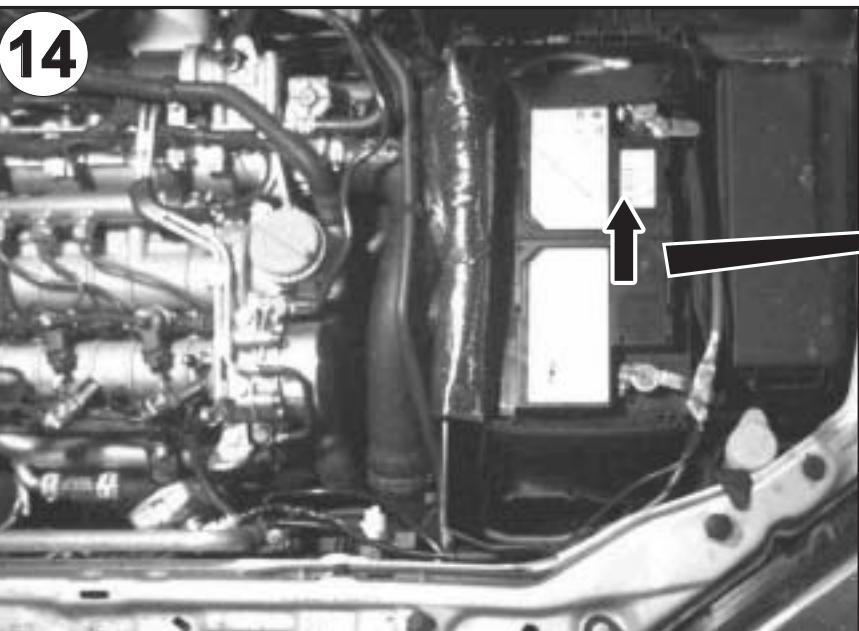

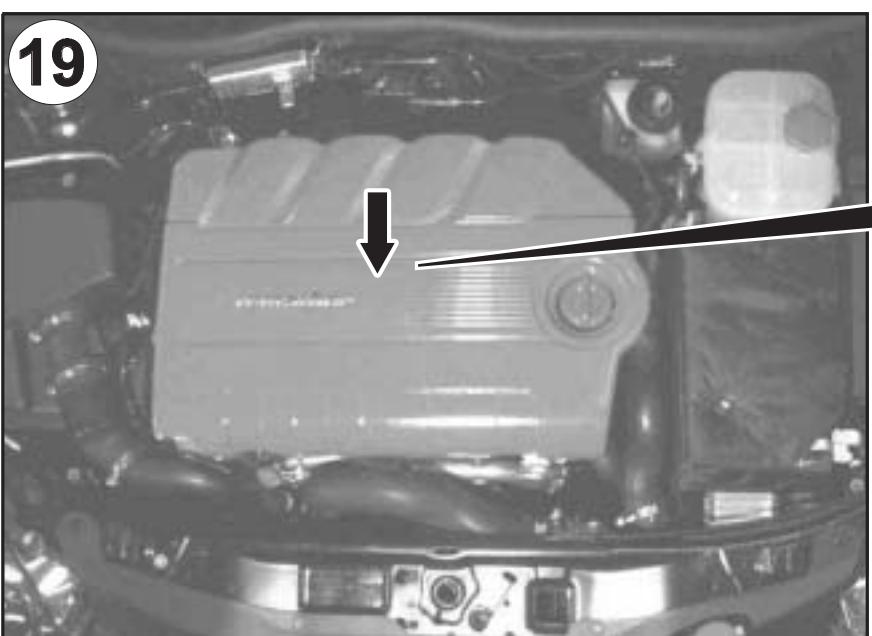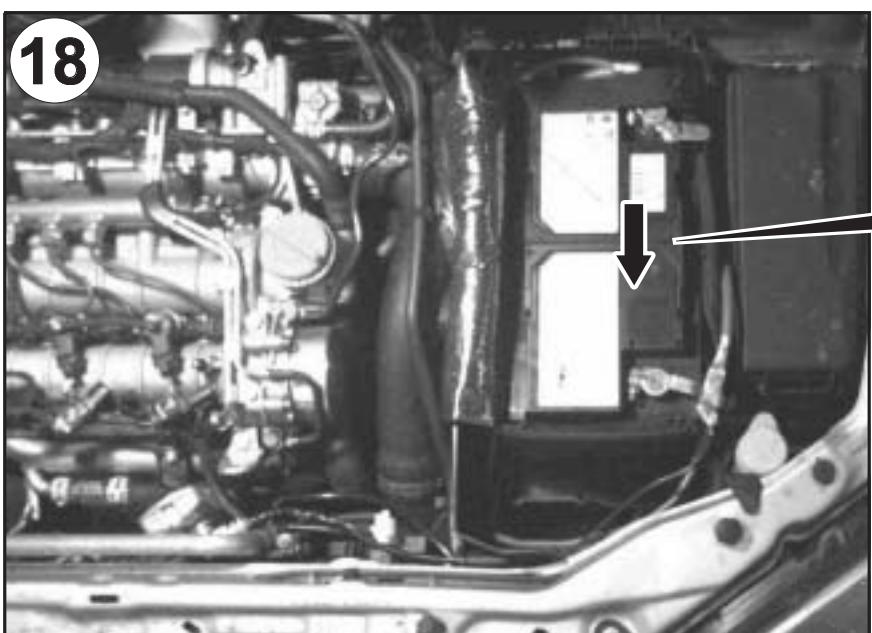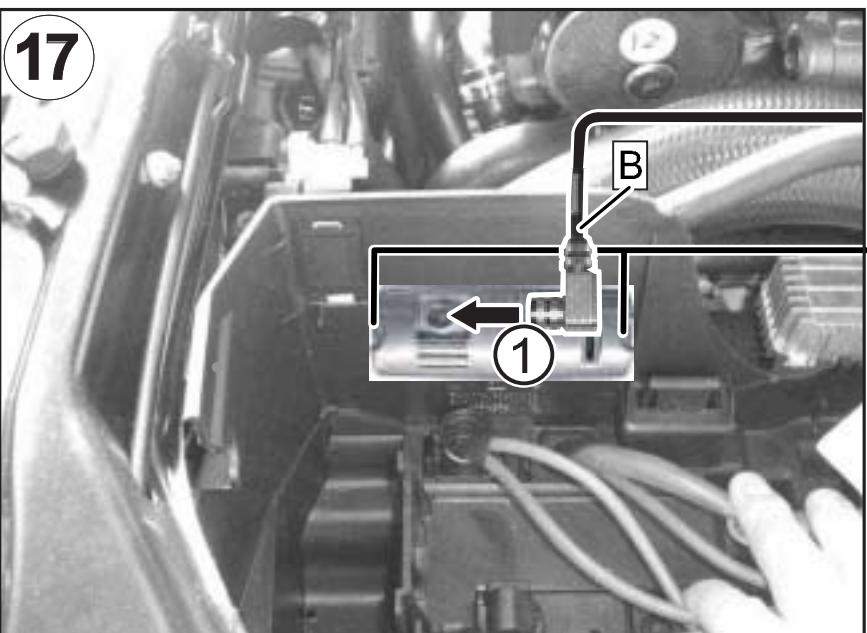

Allgemeine Hinweise/ General notes:

1)

LED 4 Leuchtet bei einer Spannungsversorgung von 12V.

Shines at a electric power supply of 12V.

LED 3 Blinkt in Abhängigkeit der Motordrehzahl, gleichzeitige Erkennung der Injektorsignale.

Is flashing in dependence of the engine revs and for the identification of the injection signals.



LED 2 Leuchtet, sobald die Kaltphase beendet ist. Die Leistungssteigerung kann nun aktiv werden.

Is shining as soon as the start phase is over. The performance kit will come into operation.

LED 1 Leuchtet, sobald die Leistungssteigerung aktiv in den Regelkreis der Einspritzanlage des Fahrzeuges eingreift.

Shines as soon as the performance kit is working active into the control circle of the injection system.

2)

Nur für Fahrzeuge mit serienmäßigem Dieselpartikelfilter und Schaltgetriebe.

Only for vehicles with diesel particulate filter and manual transmission (MT).

3)

Im Regenerationszyklus des Dieselpartikelfilters ist die Leistungssteigerung inaktiv. Das Fahrverhalten, Leistungsabgabe des Motors unterscheidet sich im Regenerationszyklus daher gegenüber dem gewohnten Verhalten.

During regeneration cycles of the diesel particulate filter the performance kit is not in operation. The driving condition i.e. the power output is different during these regeneration cycles.