




| | | | |
|---------------------|---|-----------|--|
| GF00.19-U-3000-06DA | Arrangement and assignment of Z connector sleeves (solder splices in wiring harness) - trunk (left) | MODEL 211 | |
|---------------------|---|-----------|--|

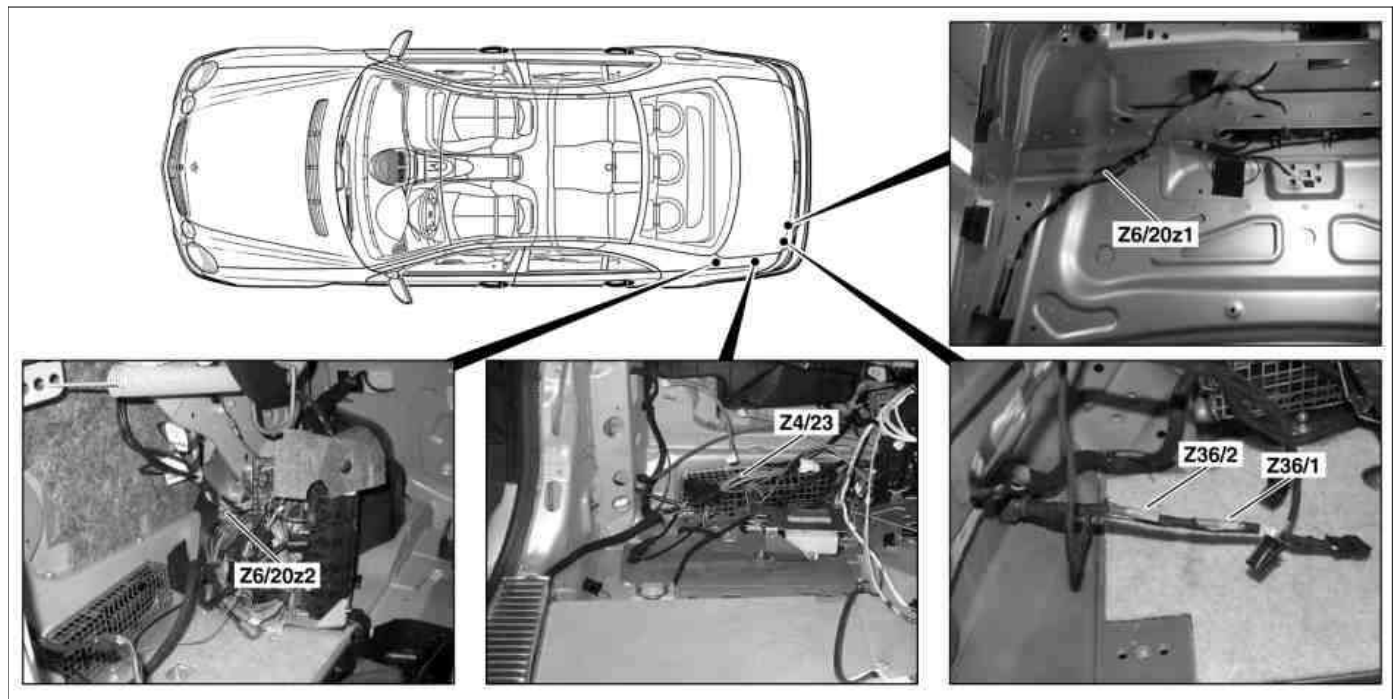

P00.19-3857-09

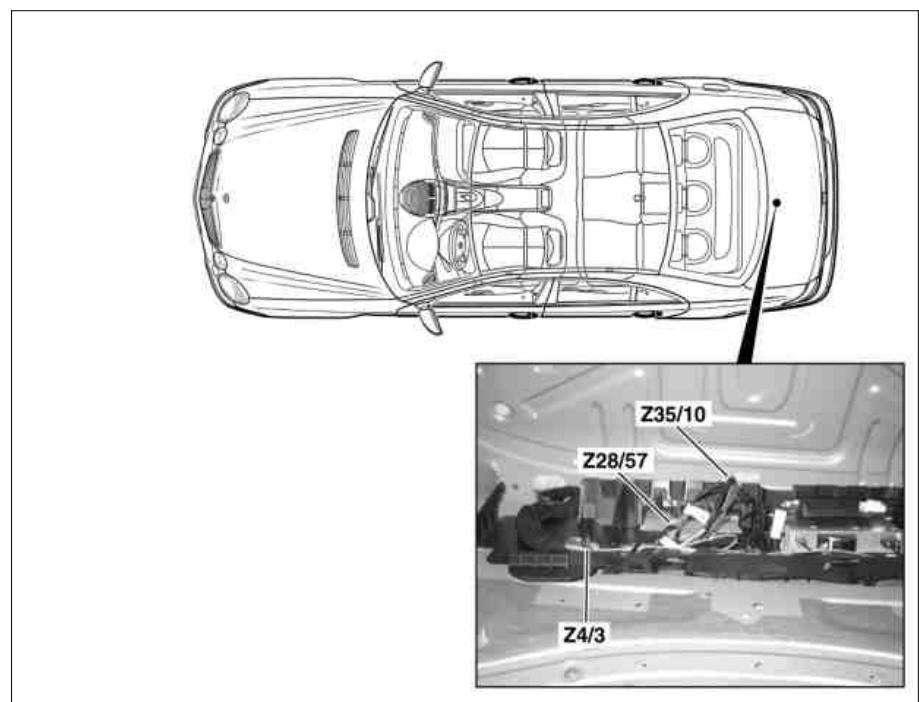

P00.19-3858-06

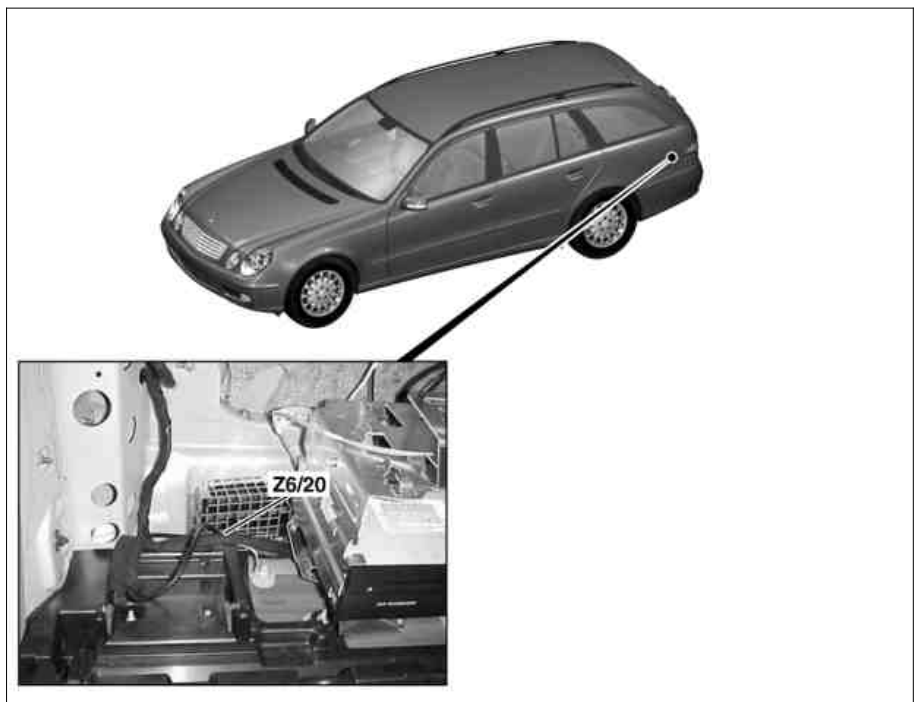

P00.19-3859-06

| Z conn. sleeve | Designation | Comp. | Designation | Conn. pin |
|----------------|---|--|---|--|
| Z4/3 | Circuit 30 connector sleeve UP TO 08/04 | ← F33 → A28/3 → N112 → X39/57 | Rear prefuse E-net compensator Telecommunications control module Bluetooth module connector | 85 1.1 1.2 1.12 1.2 |
| Z4/3 | Circuit 30 connector sleeve AS OF 09/04 UP TO 05/08 | ← F33 → N123/1 | Rear prefuse Universal Portable CTCL Interface (UPCI [UHI]) control module | 85 1.20 1.21 |
| Z4/3 | Circuit 30 connector sleeve Valid for Wagon, AS OF 06/08 | ← N10/2 → A2/71 → A2/72 → A2/74 | Rear SAM control module with fuse and relay module Amplifier module 1, screen antenna Amplifier module 2, screen antenna Amplifier module 4, screen antenna | 23.4 E.2 E.3 E.3 |
| Z4/23 | Antenna circuit 30 connector sleeve UP TO 05/08 | ← N10/2 → A2/64 → A2/71 | Rear SAM control module with fuse and relay module Left antenna amplifier module Amplifier module 1, screen antenna | 23.4 5.2 6.3 |
| Z6/20 | Tailgate ground connector sleeve Valid for Wagon UP TO 05/05 | ← W8/3 → E3/1 → E4/1 → E37 → E19/1 → R2/8 → S62/26 | Ground (tailgate - bottom) Left rear door taillamp Right rear door taillamp Rear-end door spotlight Left license plate lamp Tailgate washer nozzle heater RTL [HDFS] pushbutton | 1.3 1.3 1 1 2 1 |
| Z6/20z1 | Tailgate ground connector sleeve Valid for Sedan UP TO 02/03 AS OF 03/03 | ← W6 → E19/1 → E19/2 → E21 → E40 → S88/4 → S88/4 → S88/6 → S88/8 | Ground (left wheelhousing in trunk) Left license plate lamp Right license plate lamp Center high-mounted stop lamp Trunk lid ambient lamp Pawl rotary tumbler switch Pawl rotary tumbler switch Trunk lid contact switch Trunk lid external operation switch | 1 1 1 1 2 3 1 1 |
| Z6/20z1 | Tailgate ground connector sleeve Valid for Wagon | ← W8/3 → E19/2 → M6/4 | Ground (tailgate - bottom) Right license plate lamp Tailgate wiper motor | 1 3 |
| Z6/20z2 | Tailgate ground connector sleeve Valid for Sedan | ← W6 → E3 → E4 → E18/4 → E18/5 | Ground (left wheelhousing in trunk) Left taillamp Right taillamp Right trunk lamp Left trunk lamp | 3 5 1 1 |
| Z28/57 | Portable CTCL control signals connector sleeve UP TO 05/08 | ← N123/1 → N123/4 | Universal Portable CTCL Interface (UPCI [UHI]) control module Emergency call system control unit | 1.28 1.14 |

| | | | | |
|---------------|---|--|--|--|
| | | UP TO 09/05 → A28/2 AS OF 10/05 → A28/2x1 | CTEL compensator, data Portable CTET antenna amplifier connector | 1.3 3 |
| Z28/57 | Portable CTET control signals connector sleeve AS OF 06/08 | ← A40/3 → A28/2 → A34/7 → N123/4 → X39/48 | COMAND operating, display and control module CTEL compensator, data Bluetooth module Emergency call system control unit Breakdown assistance/info button plug distributor | 1.3 1.3 10.3 1.14 5 |
| Z35/10 | MOST wake-up signal connector sleeve | ← X30/8 → A35/11 → N87/5 UP TO 08/04 → N112 AS OF 09/04 → N123/1 | Wake-up signal connector Voice control system control module SDAR control unit Telecommunications control module Universal Portable CTET Interface (UPCI [UHI]) control module | 1A.18 1.3 1.23 1.24 |
| Z36/1 | Rear PTS sensor ground connector sleeve | UP TO 05/08 ← N62 AS OF 06/08 ← N62 UP TO 05/06 → A43 AS OF 06/06 → B8/7 AS OF 06/06 → B8/8 AS OF 06/06 → B8/9 AS OF 06/06 → B8/10 → X35/28 | PTS control module PTS control module PTS sensor unit, rear bumper Outer right rear PTS ultrasonic sensor Inner right rear PTS ultrasonic sensor Inner left rear PTS ultrasonic sensor Outer left rear PTS ultrasonic sensor PTS connector, rear bumper | A.8 B.7 7.2 8.2 9.2 10.2 2 2 2 2 5 |
| Z36/2 | Rear PTS sensor voltage supply connector sleeve | UP TO 05/08 ← N62 AS OF 06/08 ← N62 UP TO 05/06 → A43 AS OF 06/06 → B8/7 AS OF 06/06 → B8/8 AS OF 06/06 → B8/9 AS OF 06/06 → B8/10 → X35/28 | PTS control module PTS control module PTS sensor unit, rear bumper Outer right rear PTS ultrasonic sensor Inner right rear PTS ultrasonic sensor Inner left rear PTS ultrasonic sensor Outer left rear PTS ultrasonic sensor PTS connector, rear bumper | A.28 B.16 7.4 8.4 9.4 10.4 3 3 3 3 4 |