



CFE Installation MANUAL

Applicable to:

CFE with CFE-AEM cable.

To install the CFE in your Volvo, using the CFE-AEM cable, a few simple steps are to be taken.

Pre requirements;

- Car ignition is in position OFF.
- AEM cable in your Volvo has been found (see picture below!)
- CFE has been configured with the CFE Updater software



Kind	Installation Manual
Titel	Installation manual for CFE (Canbus Function Extender)
Language	English
Version	1.0
Date	September 3rd 2012
Applicable to	CFE with CFE-AEM connector
Contents	Manual describes installation of the CFE




Check power availability on the AEM connector;

When the CFE is connected to your car using an AEM-cable, generally a fuse has to be placed in the REM (Rear Electronica Module) of your car.

This fuse is included in the package!

The picture below indicates the location of the REM and location of the fuse to be inserted.

Although the picture shows a Volvo V70/XC70, S60/S80 have the REM in the same location and the fuse location is the same as well; Fuse location 11 (marked red).

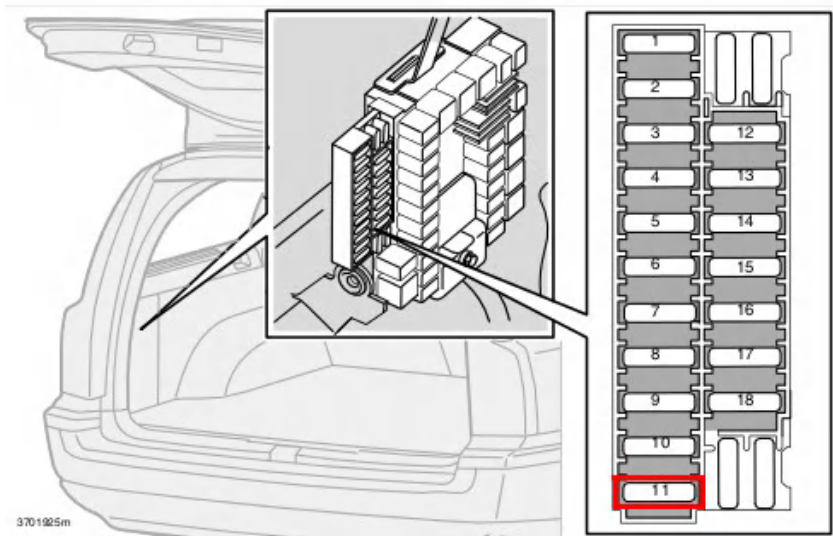

Picture used from original Volvo Cars Corporation Manual of V70/XC70 2003



Connect the CFE with the CFE-AEM cable to the AEM;

The AEM connector of your Volvo can be found in the trunk.

Just remove the right removable cover. You will find (foamed) a black connector with 4 pins, looking the same as 1 side of the CFE-AEM cable supplied to you by VolvoTech.EU.

In case there is a Volvo AEM Module installed, you can remove the black connector from that Module, and put the cable supplied by VolvoTech.EU in between the original cable and the AEM.



If physical connections are made, open a door or press any button on the remote of the car and at least one led should light, flash or keep flashing.

If you do not see any led; please confirm that you have made settings and "activated them" with the VolvoTech CFE Updater!