


AR72.10-P-1000GZ	Remove/install front door lining	14.11.05
------------------	----------------------------------	----------

MODEL 164

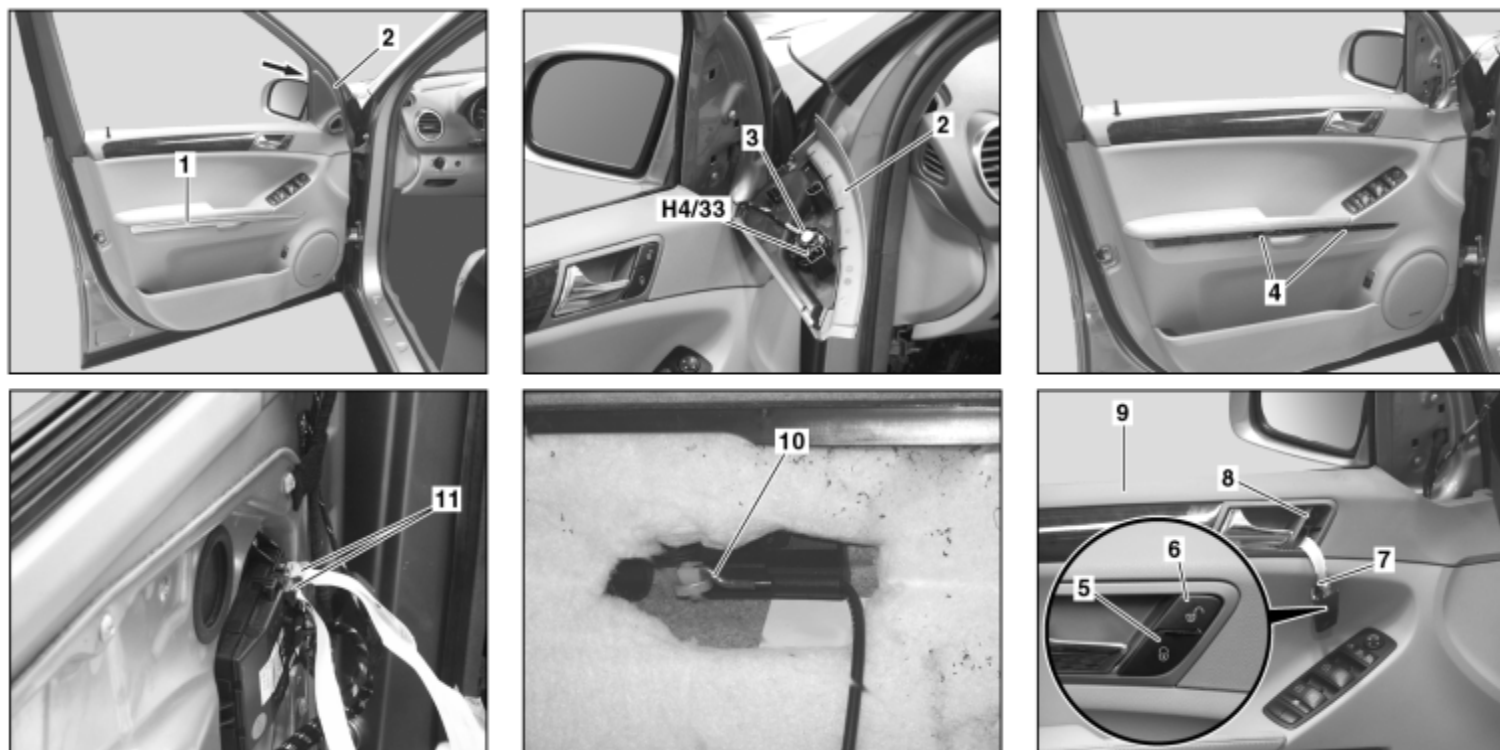











P72.10-3045-09

**Shown on model 164.1 with automatic rear-end door,
code 890**

- 1 Trim strip
- 2 Mirror triangle cover
- 3 Electrical connector
- 4 Screws
- 6 Central locking switch
- 7 Electrical connector

- 8 Screw
- 9 Door lining
- 10 Control cable
- 11 Electrical connectors

H4/33 Left front door tweeter

	Remove/install		
1	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit	 On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Pry trim strip (1) off door lining (9)	 Mounting wedge	110 589 03 59 00
3	Unclip mirror triangle cover (2)	 Unclip the mirror triangle cover (2) at the top (arrow).	
		 Mounting wedge	110 589 03 59 00
4	Disconnect electrical connector (3) from left front door tweeter (H4/33)		
5	Remove screws (4)		
6	Press both central locking buttons simultaneously; remove central locking switch (6) from door lining (9)	 Pull the tab visible between the central locking buttons. Do not disconnect the electrical connector (7) from the central locking switch (6).	
7	Remove screw (8)		
8	Pry off door lining (9)	 Unclip the clips at the bottom and side of the door lining in order to prevent the clip holder from breaking off. Installation: Replace damaged clips.	
		 Mounting wedge	110 589 03 59 00
9	Lift door lining (9) upwards and inwards	 In order to provide access to the Bowden cable (10).	
10	Detach Bowden cable (10) from inside of door opener		
11	Separate electrical connectors (11)	 Handle the ribbon cable with care to prevent damage.	

12	Remove door liner (9)		
13	Install in the reverse order		



110 589 03 59 00

Mounting wedge