


Instructions for Android 12 Car Radio with Frame

Table of Contents:

1. Product Images	Page	2 - 4
2. Instruction Manual	Page	5
3. Technical Images	Page	6 – 12

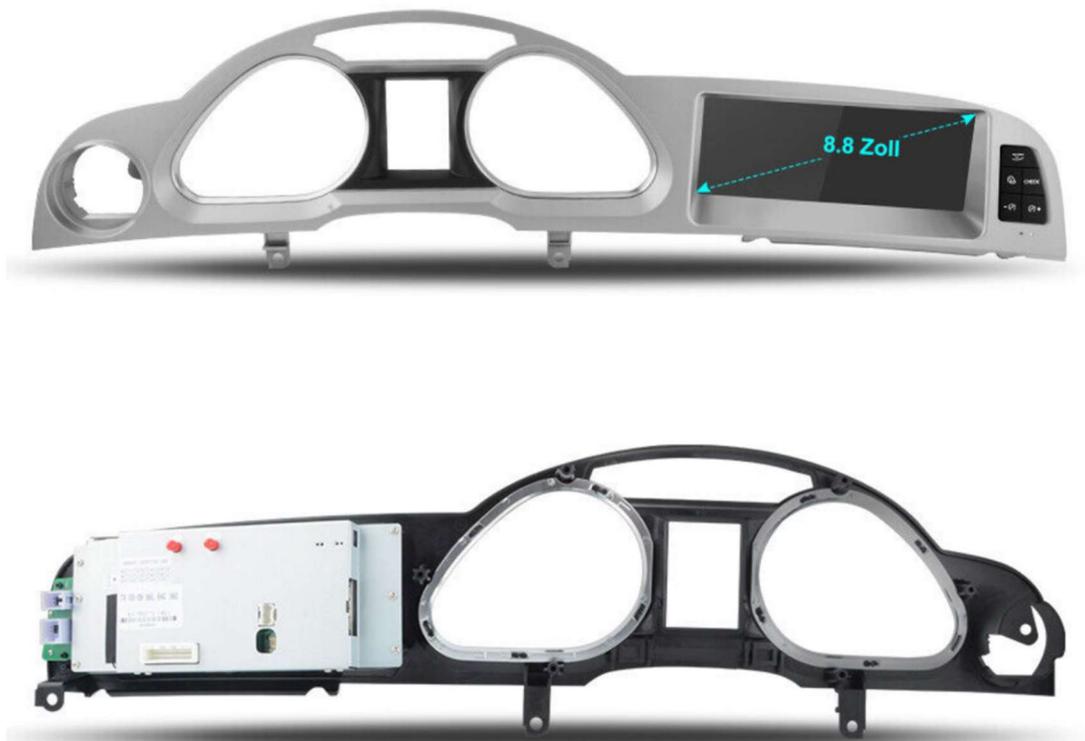



Technical images of an Audi A6 4F model from 2008

The numbers shown in parentheses correspond to the parts of the illustration on the respective page.

For Audi A6 C6 4F
2006-2009
(Original MMI 2G)



with SETUP button

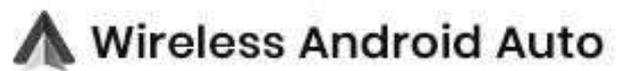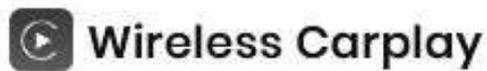

Bitte Beachten !!




Bitte bestätigen Sie das Baujahr Ihres Fahrzeugs vor der Bestellung, wenn Ihr Fahrzeug von 2010-2012 ist, kontaktieren Sie uns bitte, um eine andere Version zu bestellen.



Für Audi A6 C6 4F Niedrige Version
MMI 2G (2005-2009)



Für Audi A6 C6 4F Hohe Version
MMI 3G (2010-2012)

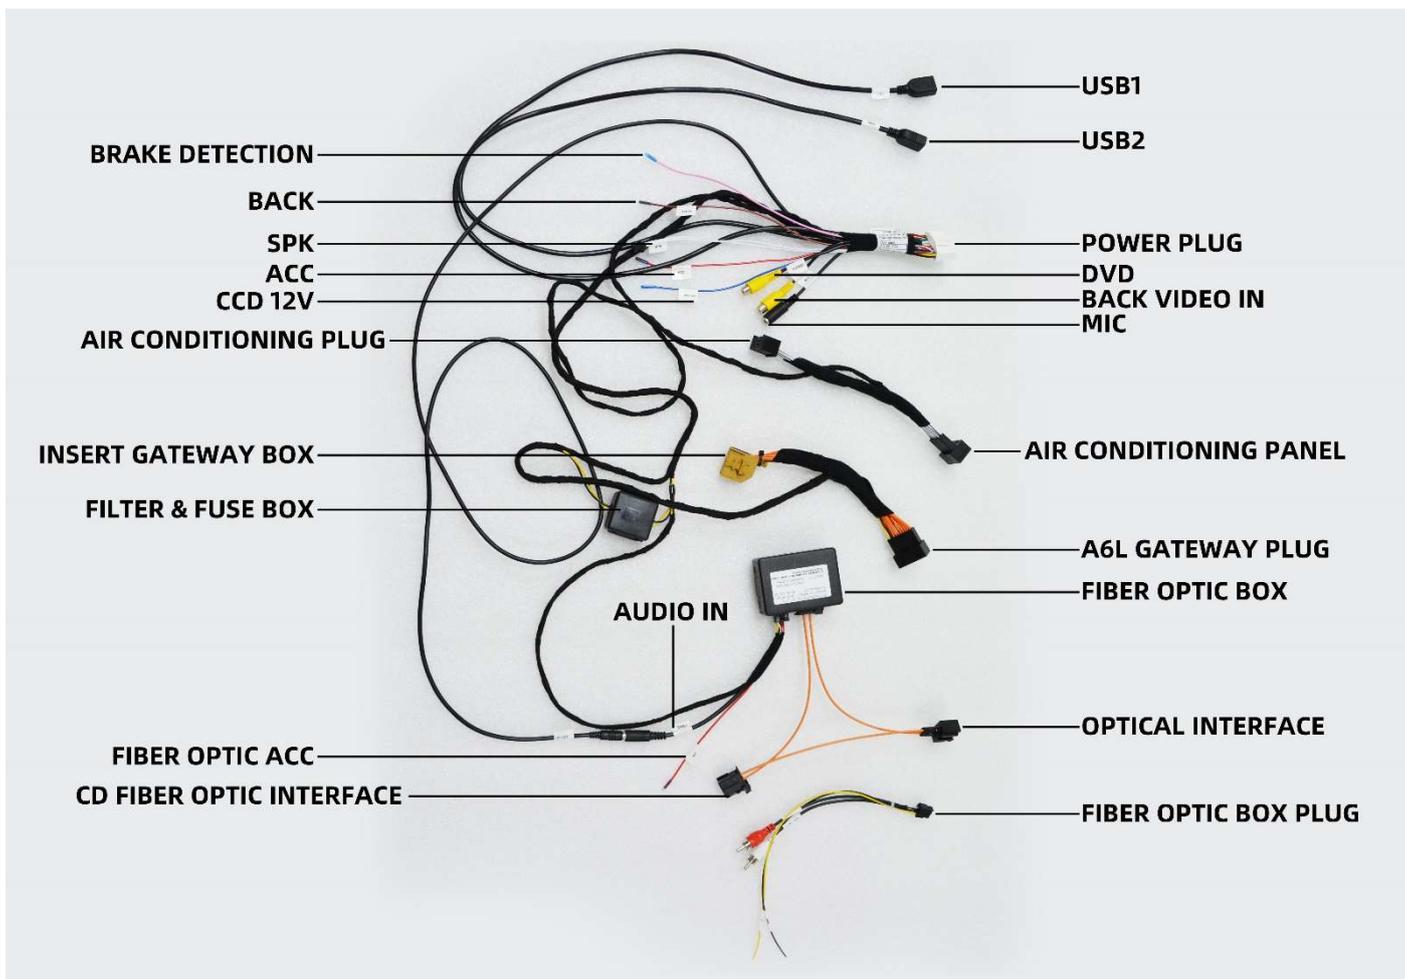

Step-by-Step Guide:

1. If possible, connect the vehicle to a battery charger.
2. The clip (3) must be pressed to remove the air vents (17, see page 6).
Caution, short cables!
Only the driver side and the middle air vents need to be removed!
The middle air vents are connected to the warning light switch cover.
3. Press the multifunction switch for the headlights (30) out by reaching into the hole of the air vent (see page 7).
4. Open the glove compartment for the later part of the instructions.
5. The multifunction switches for the day mileage reset (6) and the glove compartment (7) have a cover (10) that need to be removed (see page 8).
6. Now remove both multifunction switches (6, 7).
Pull them straight out, preferably with a hook screwdriver. Some force is required here (see page 8).
7. Next, remove the screws (27), there are 5 or 6 (see page 6).
8. If you have an automatic transmission, put the gear lever into the „S“ position and leave the key in the ignition lock.
Now remove the cover (6, see page 9) to retrieve the control and display element for the air conditioning (1/2, see page 10) so that the cable „Air Conditioning Panel“ can be connected there (see page 4).
9. Remove the glove compartment to gain access to the MMI control unit.
Remove the screws (11) from the inside as well as from the outside, bottom rear (see page 11).
10. As you'll be working in a difficult overhead position, I recommend the simple way:

Simple Way:
Unscrew the MMI control unit (1, see page 12) to connect the cable „A6L Gateway Plug“ (see page 4) to the port (19, see page 12) on the MMI control unit.

Harder way:
Connect the cable „A6L Gateway Plug“ (see page 4) to the port (19, see page 12) on the MMI control unit (1, see page 12).
11. Connect the cable „Optical Interface“ (see page 4) and the plug „Fiber Optic Box Plug“ to the „Fiber Optic Box“ (see page 4).
Connect the second end of the „Optical Interface“ to the CD Player (2, see page 12).
12. After connecting the GPS and 4G antennas and routing all cables, re-tighten and assemble everything back together.

