


TAVOLA COLORI

B	Nero	Br	Marrone
Y	Giallo	O	Arancione
L	Blu	SB	Azzuro
G	Verde	LG	Verde chiaro
R	Rosso	P	Rosa
W	Bianco	GR	Grigio

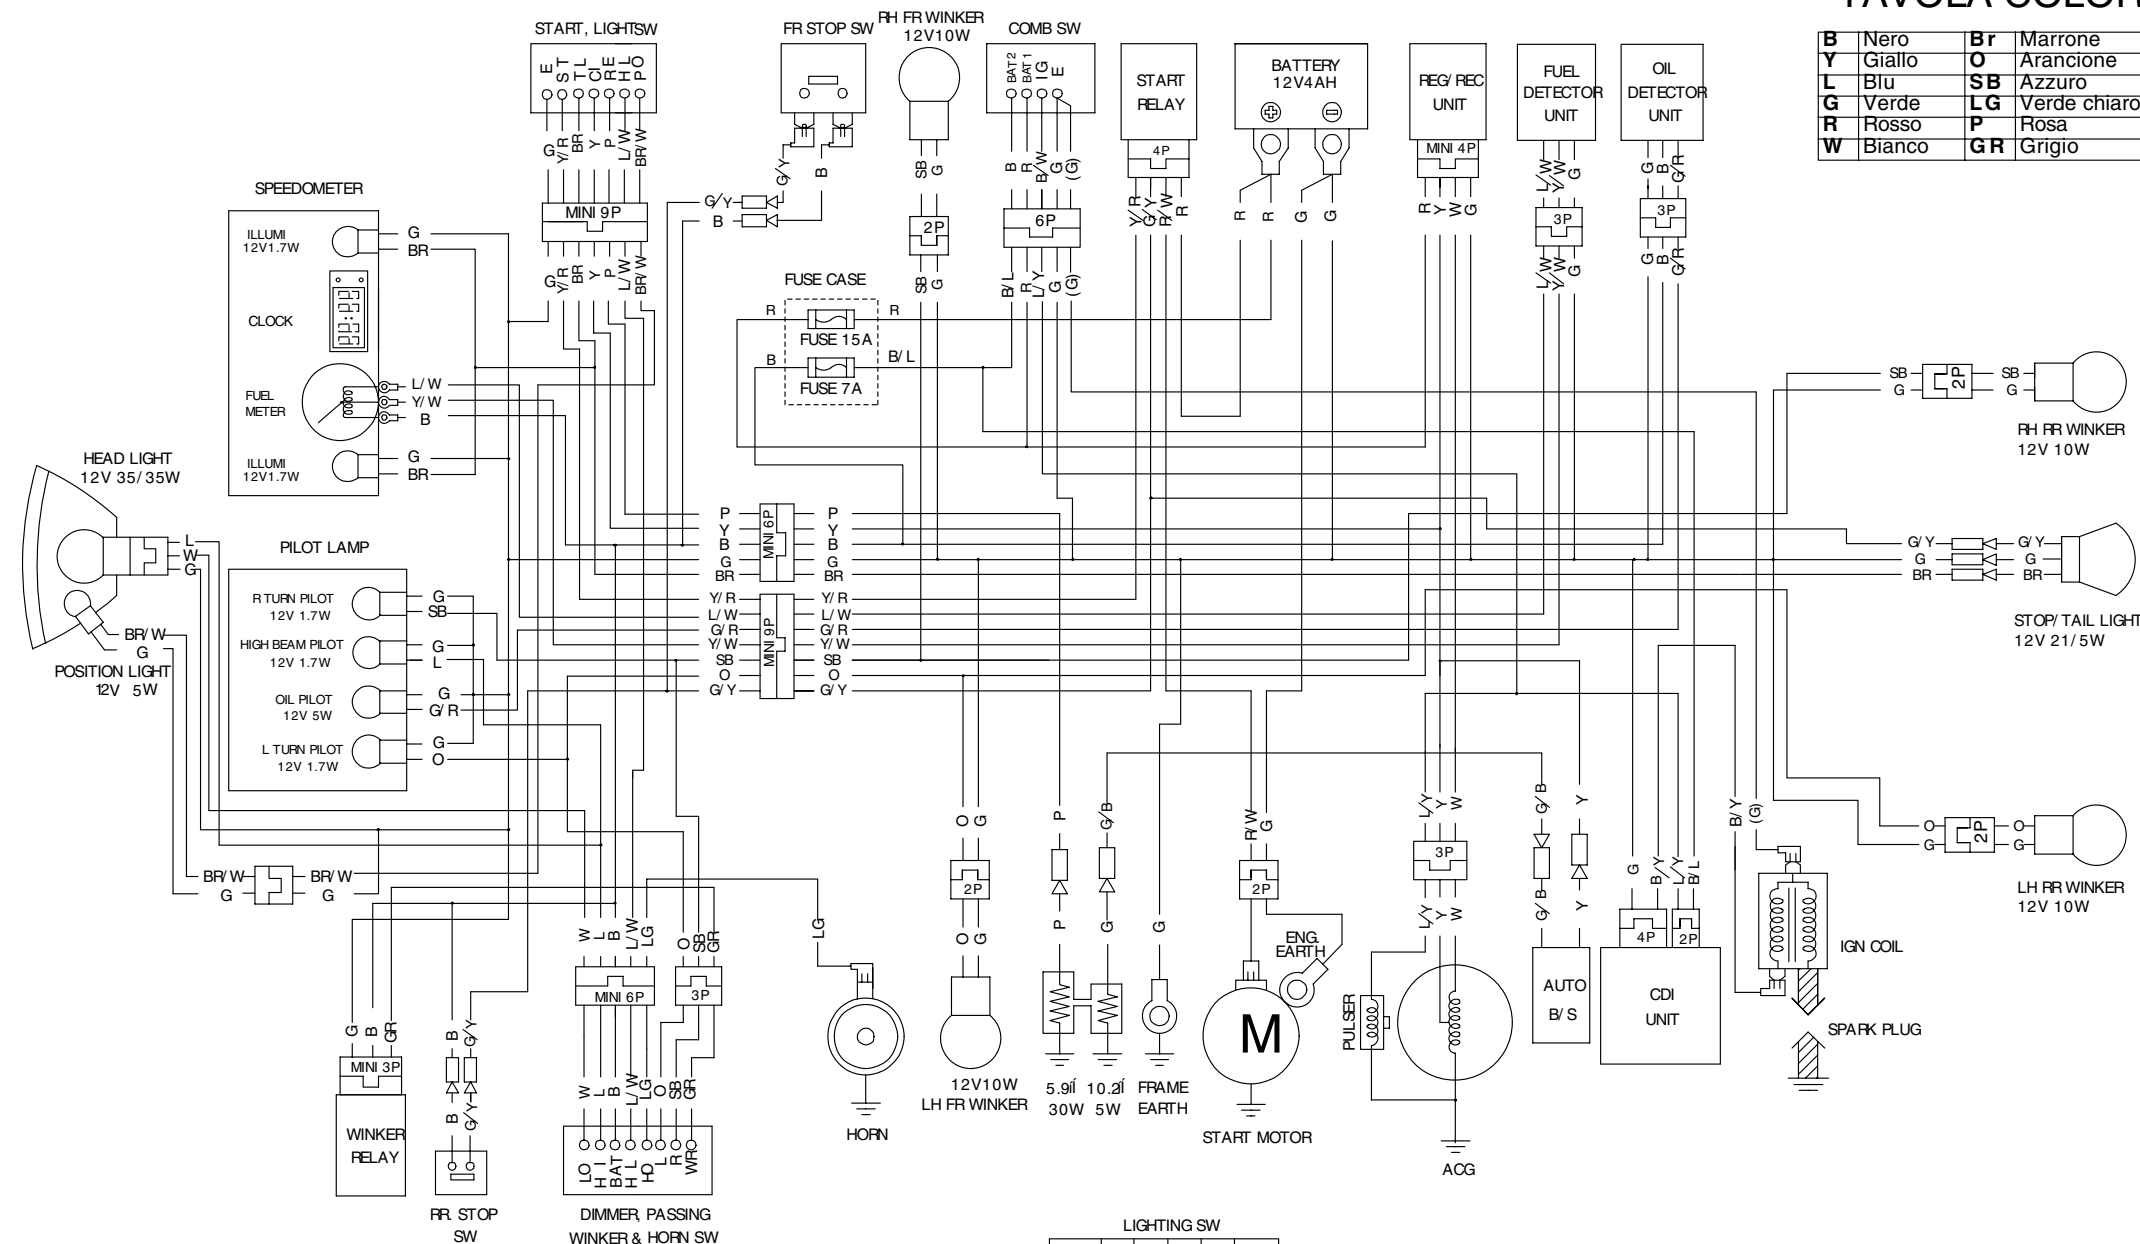

START SW

	ST	E
FREE		
PUSH	○	○
COLOR/Y/R		G

PASSING SW

	HI	HL	BAT	LO
PASS	○	○	○	○
COLOR/L	L/W	B	W	

HORN SW

	HO	BAT
FREE		
PUSH	○	○
COLOR/LG	Br/L	

COMB SW

	BAT1	IG	E	BAT2
LOCK		○	○	
OFF		○	○	
ON	○			○
COLOR/R	B/W	G	B	

WINKER SW

	R	L	WR
L		○	○
N			
R			○
COLOR/SB	O	GR	

LIGHTING SW

	CI	RE	TL	HL	PO
OFF	○	○			
N	○		○		
P	○		○		○
N	○		○	○	
H	○		○	○	
COLOR/Y	P	BR	L/W	Br/W	W

DIMMER SW

	HL	HI	LO
LO	○		○
N	○	○	○
HI	○	○	○
COLOR/L/W	L	W	

KYMCO People 50
Impianto elettrico