

Pin assignment, onboard power supply control unit -J519

Connector A (10-pin)

Pin 1: Daylight driving light front right

Pin 2: Main beam right

Pin 3: Fog light front right

Pin 4: Dipped beam right

Pin 5: Terminal 38 right

Pin 6: Daylight driving light front left

Pin 7: Fog light front left

Pin 8: Main beam left

Pin 9: Terminal 31 Power

Pin 10: Dipped beam left

Connector B (12-pin)

Pin 1: Terminal 58 gate

Pin 2: Steering column adjuster switch

Pin 3: Vacant

Pin 4: Terminal 31 electronics

Pin 5: Washer pump front for rear intermittent

Pin 6: Steering column height adjustment

Pin 7: Washer pump rear for rear wipe/wash

Pin 8: Steering column down adjustment

Pin 9: Front right turn signal

Pin 10: Front left turn signal

Pin 11: Terminal 38 Power

Pin 12: Terminal 38 left

Connector C (32-pin)

Pin 1: Front right footwell

Pin 2: Front left footwell

Pin 3: Side flasher left

Pin 4: Side marker lamp (USA)/side light left

Pin 5: Vacant

Pin 6: Main beam shutter left

Pin 7: Rotary light switch Off

Pin 8: Rate action 1 digital terminal 30

Pin 9: Reversing light switch

Pin 10: Vacant

Pin 11: Rate action 3 analog

Pin 12: Headlight washer system relay

Pin 13: Rotary light switch dipped beam/automatic driving lights


Pin 14: Side flasher right

Pin 15: Side marker lamp (USA)/side light right


Pin 16: Main beam shutter right

Umpinnen für RS6 Scheinwerfer

Linke Seite

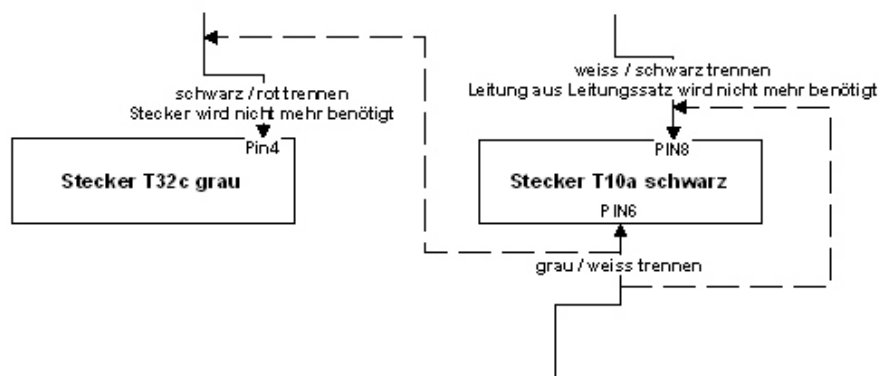

Rechte Seite

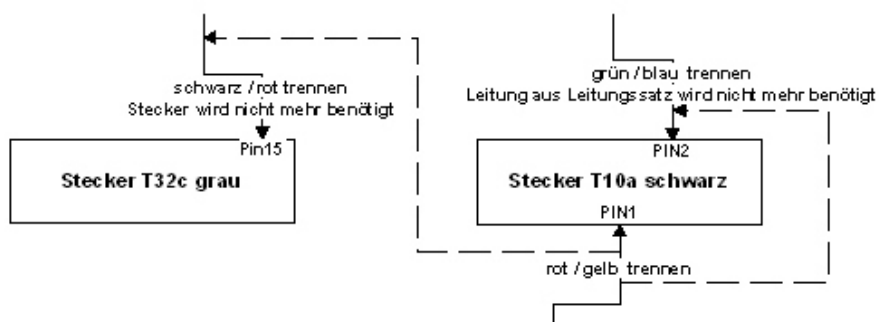

Pin 17: Horn relay

Pin 18: CAN high

Pin 19: CAN low

Pin 20: Hazard warning lights button LED

Pin 21: Anti-theft alarm/bonnet contact switch

Pin 22: Hazard warning lights button

Pin 23: Rotary light switch, side lights

Pin 24: Vacant

Pin 25: Supply Hall sender height

Pin 26: Vacant

Pin 27: LIN2

Pin 28: LIN1 (Wipe angle control/ rain and light sensor)

Pin 29: Rotary light switch, fog light/fog tail light

Pin 30: Hall sender depth

Pin 31: Hall sender height

Pin 32: Supply Hall sender depth