

Development of High power and Long life Lithium secondary batteries

Shoichiro Watanabe, Takashi Hosokawa,
Ken'ichi Morigaki, Kensuke Nakura
and Munehisa Ikoma

Panasonic Corporation, Energy Company
Technology Development Center
1-1 Matsushita-cho, Moriguchi City, Osaka 570-8511,
Japan

Lithium-ion batteries have been widely used for lap-top PC, cellular phones and DSC applications as they have high energy density. Rising of environmental awareness, lithium-ion batteries are expected to be applied to automobile applications and electric energy storage use. For Plug-in Hybrid Electric Vehicle (PHEV) and Battery Electric Vehicle (BEV) applications, longer calendar life is necessary compared to the conventional usage.

The Li(Ni,Co,Al)O₂-based cathode, which is known to be a high capacity active material, showed better durability in storage tests and cycle tests than the other cathode materials (LiCoO₂, Li(Ni,Mn,Co)O₂).[1-3] For EV or home electric storage applications, we proposed a multipurpose standard module composed of 140 18650-type cylindrical cells with above-mentioned Li(Ni,Co,Al)O₂-based cathode.[1,3]

In order to enhance battery durability, deterioration behaviors of Li(Ni,Co,Al)O₂-based cathode / graphite cells (400 mAh cylindrical type) were investigated. The cells used in this investigation were composed of LiNi_{0.76}Co_{0.14}Al_{0.10}O₂ cathode, graphite anode, electrolyte and micro-porous polyethylene separator. Electrolyte was a mixture of ethylene carbonate (EC), ethyl methyl carbonate (EMC) and dimethyl carbonate (DMC) with lithium hexafluorophosphate (LiPF₆).

Fig.1 shows the results of storage tests of the cells. Storage tests were performed at either SOC (State of Charge) of 30 or 90% and at temperatures of 25 or 60°C. As shown in Fig.1, the change ratios in capacity and DC-IR (Direct Current Inner Resistance) depended on SOC and temperature, respectively.

Fig.2 shows the results of charge/discharge cycle tests of the cells. Cycle tests were performed in voltage range of 3.60 to 4.05V at either operated current rates of 2 or 1I_t and at temperatures of 25 or 50°C. As shown in Fig.2, the change ratios in DC-IR depended on temperatures while no significant correlation between capacity fade and operated current or temperature was observed.

In order to identify the causes of deteriorations in capacity and DC-IR, tested cells were disassembled after storage and cycle, and then various analysis were performed by using scanning electron microscopy (SEM), X-ray diffraction (XRD), X-ray photoelectron spectroscopy (XPS), inductively coupled plasma atomic emission spectrometry (ICP-AES) and so on. We will discuss in detail about deterioration mechanisms from these analysis data.

References

[1] S.Watanabe, M.Kinoshita and K.Nakura, The 15th International Meetings of Lithium Batteries, Montreal, July 1st, 2010.
[2] S.Watanabe, M.Kinoshita and K.Nakura, *J Power Sources*, in press.
[3] K.Nakura, M.Kinoshita, J.Sugaya and T.Nanno, The 218th ECS Meeting, Las Vegas, October 14th, 2010.
[4] M. Broussely, Ph. Biensan, F. Bonhomme, Ph. Blanchard, S. Herreyre, K. Nechev and R.J. Staniewicz, *J. Power Sources*, **146**, 90 (2005)

Acknowledgement

This work has been conducted as NEDO Programs, "Development of High-performance Battery System for Next-generation Vehicles", which is financially supported by NEDO (The New Energy and Industrial Technology Development Organization) and METI (The Ministry of Economy, Trade and Industry).

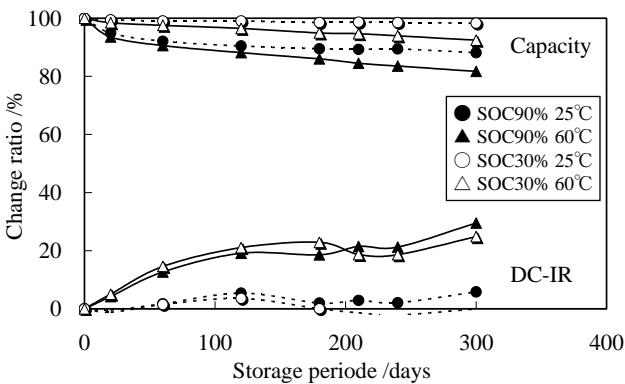


Fig.1 Storage characteristics of tested cells. Closed and open symbols indicate stored SOC of 90 and 30%, respectively. Circles and triangles indicate stored temperatures of 25 and 60°C, respectively. The vertical axis indicates the change ratio in discharge capacity or DC-IR with respect to the initial value.

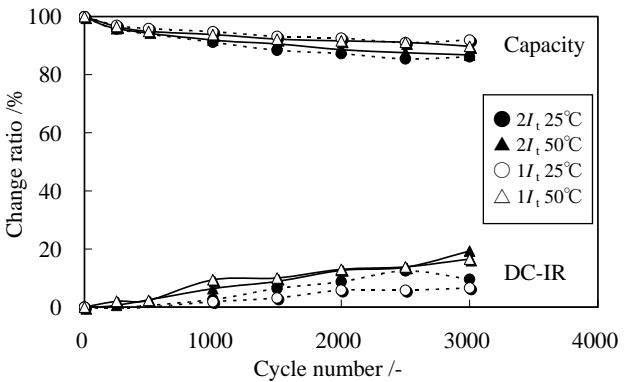


Fig.2 Charge/discharge cycle characteristics of tested cells. Cycle tests were performed in voltage range of 3.60 to 4.05V. Closed and open symbols indicate operated current rates of 2 and 1I_t, respectively. Circles and triangles indicate ambient temperatures of 25 and 50 °C, respectively. The vertical axis indicates the change ratio in discharge capacity or DC-IR with respect to the initial value.